



LANCER/LANCER EX FRONT & REAR AIRDAM INSTALLATION AND HANDLING INSTRUCTIONS

FRONT AIRDAM

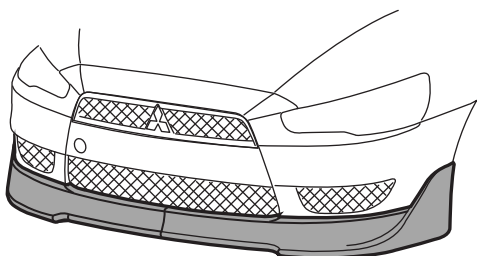

REAR AIRDAM

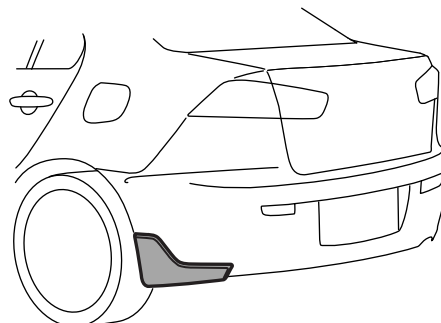

Color Name	Color Code	Part No.		
		FRONT & REAR AIRDAM	FRONT AIRDAM	REAR AIRDAM
UNPAINTED	—	MZ380451EX	MZ380452EX	MZ380453EX
COOL SILVER METALLIC	A31	MZ380480EX	MZ380493EX	MZ380504EX
BLACK MICA	X42	MZ380481EX	MZ380494EX	MZ380505EX
MEDIUM PURPLISH GRAY MICA	A39	MZ380482EX	MZ380495EX	MZ380506EX
RED METALLIC	P26	MZ380483EX	MZ380496EX	MZ380507EX
PLATINUM BEIGE METALLIC	S18	MZ380484EX	MZ380497EX	MZ380508EX
DEEP BLUE MICA	T65	MZ380485EX	MZ380498EX	MZ380509EX
AQUA METALLIC	A86	MZ380486EX	MZ380499EX	MZ380510EX
BLUE METALLIC	T70	MZ380487EX	MZ380500EX	MZ380511EX
WHITE SOLID	W37	MZ380488EX	MZ380501EX	MZ380512EX
LIGHTNING BLUE MICA	D06	MZ380489EX	MZ380502EX	MZ380513EX

Thank you for purchasing a Mitsubishi genuine accessory.

To install and use the product correctly with proper knowledge of it, read this Installation Manual carefully.

Please keep this Installation Manual in a convenient location where it can be referred to as needed.

Attention

- This publication gives precautionary instructions in the boxes titled as follows.
Read through these instructions thoroughly.



Caution

Describes precautions that should be observed in order to prevent injury or damage to the vehicle or its components, which may occur if sufficient care is not taken.



Note

Provides additional information that facilitates installation work.

 
- If you do not follow the instructions during installation or handling, it may cause not only inhibition of the function but also a malfunction of the vehicle or product.
Never install or use this product in any manner other than that stated in the Installation Manual.
- If you have any questions regarding this product, how to install it or how to use it, please contact the dealer where you purchased it.
- Please understand that Mitsubishi Motors will not be liable for any trouble that occurs as a result of not observing the instructions in this manual.

To the dealer:


Be sure that the customer receives this publication.

■ TOOLS

Torque wrench (10)



Socket wrench (8,10)

 

Extension bar (small)



 
Open-end wrench (8)



Screwdriver



Short screwdriver



Drier (use when temperature is $\leq 18^{\circ}\text{C}$)



Drill



Drill bit ($\varnothing 3$, $\varnothing 10$)



 
Protection glasses



Ornament remover




Water-based pen



Tape measure



 White gasoline or Alcohol wipe



Wiping rags



Service/Workshop Manual



■ COMPONENTS (Make sure that all of the following components were included in the kit.)

FRONT AIRDAM

Front airdam RH
: 1 piece



Front airdam LH
: 1 piece



Speed nut
: 4 pieces



Bolt (M5 x 16)
: 4 pieces



Flat washer (M5)
: 20 pieces



 
Spring washer (M5)
: 4 pieces



Nut (M5): 4 pieces



INSTALLATION AND
HANDLING INSTRUCTIONS
: 1 piece



Screw (M5 x 20)
: 12 pieces

 


Screw grommet A
: 8 pieces



REAR AIRDAM

Rear airdam RH
: 1 piece



Rear airdam LH
: 1 piece



Screw grommet A
: 6 pieces



Screw grommet B
: 2 pieces



 
Spacer
: 2 pieces



Screw (M5 x 20)
: 6 pieces



Screw (M5 x 30)
: 2 pieces



Flat washer (M5)
: 12 pieces




■ PRECAUTION


1. Temperature for drying after painting this product must be less than 80°C .
2. Never re-apply the double-sided tape, because doing so will cause a significant loss of adhesive force.
3. Never use or install this product on any other models. It may cause damage or an accident.
4. This product cannot be installed together with components not shown above.
Please be sure to use the components.

INSTALLATION PROCEDURES FRONT AIRDAM

- 1** Required only for a vehicle equipped with front fog lamps.

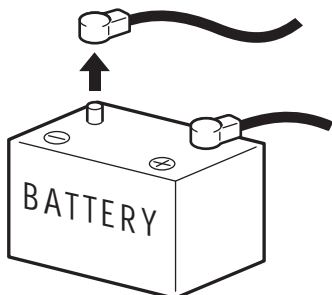


If the standard front airdam is mounted, remove the front bumper first. Then, remove the standard front airdam and install the front bumper again.

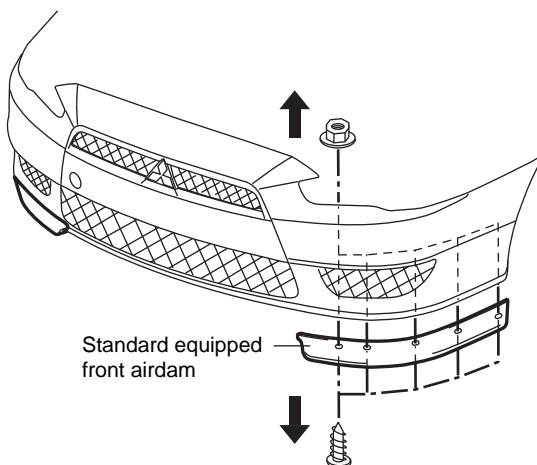


Note

Refer to the Service/Workshop Manual for the front bumper removal and installing procedure.

2

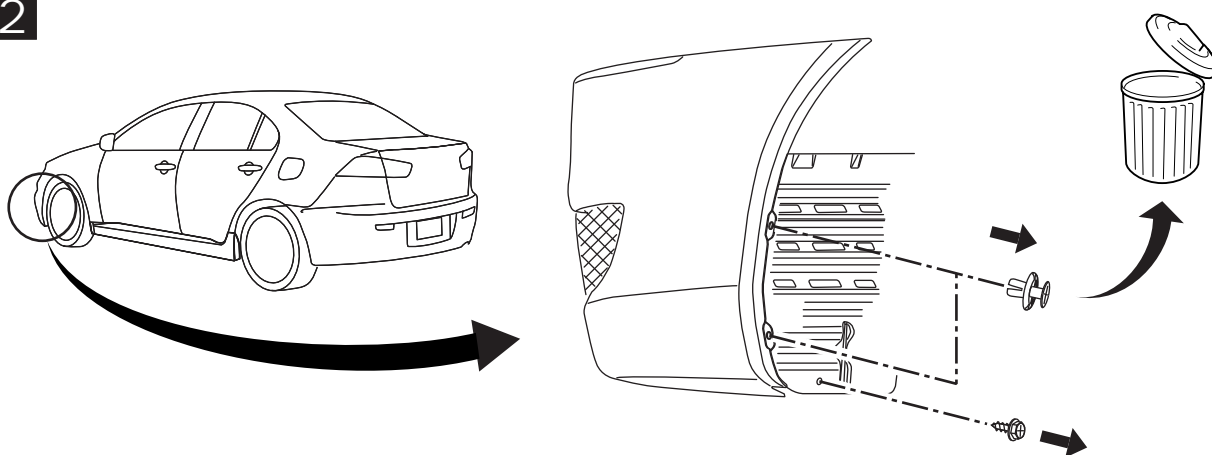


3

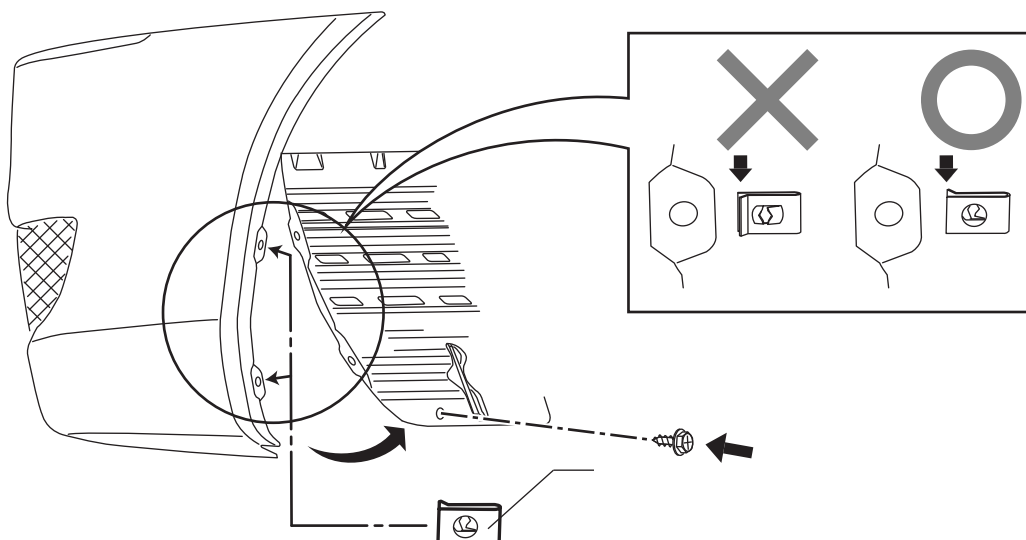


4

Peel and fold the exfoliate paper while not removing it completely.



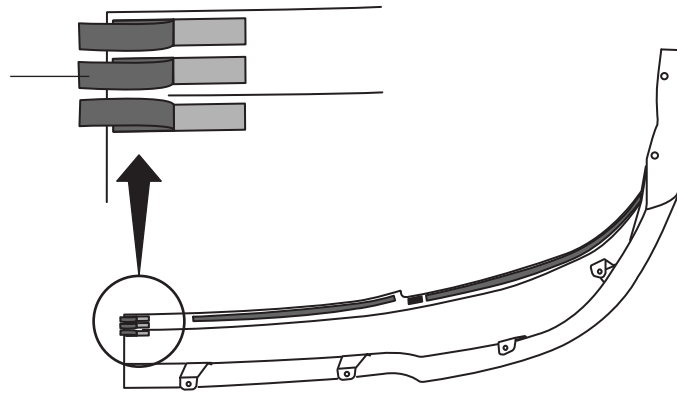


5

Temporary tightening

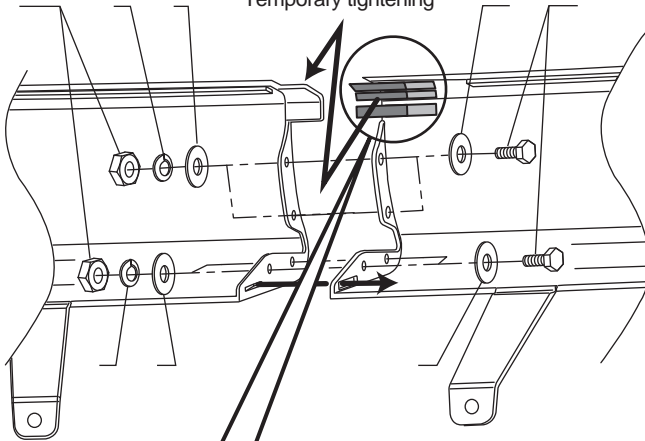


 Note

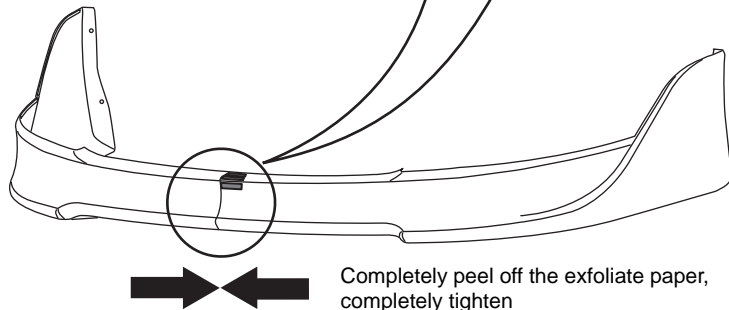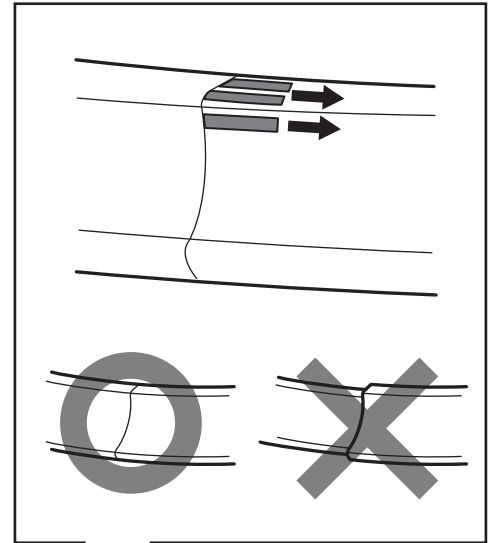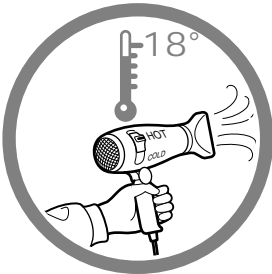


Completely peel off the exfoliate paper, completely tighten

6

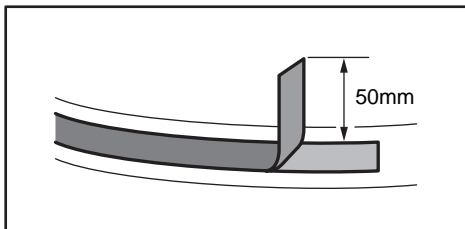


Peel and fold all the exfoliate paper outside the front airdam while not removing them completely as shown above.

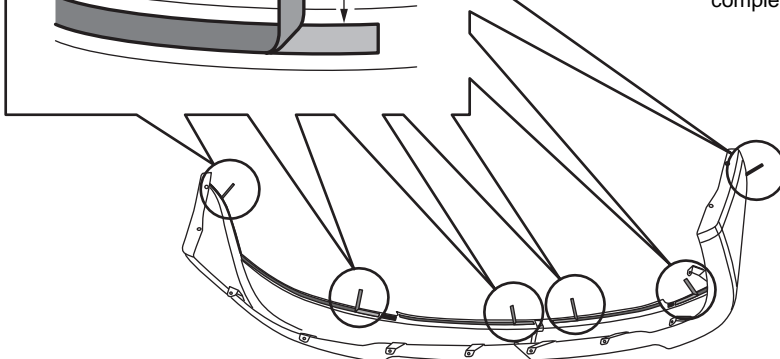


7



Lift up the vehicle.

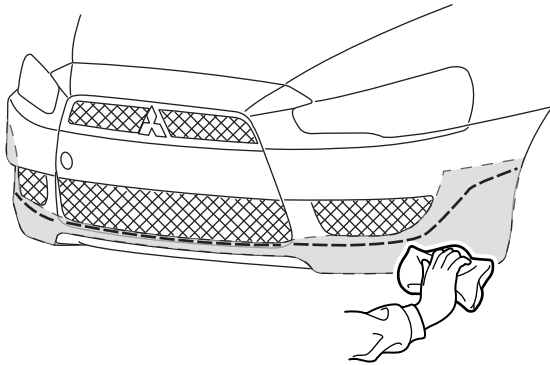


⚠ Caution

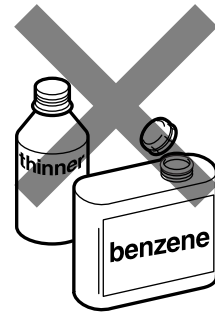

8

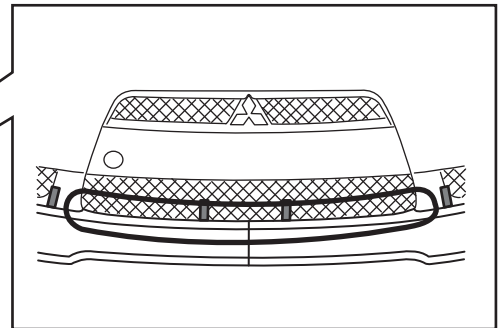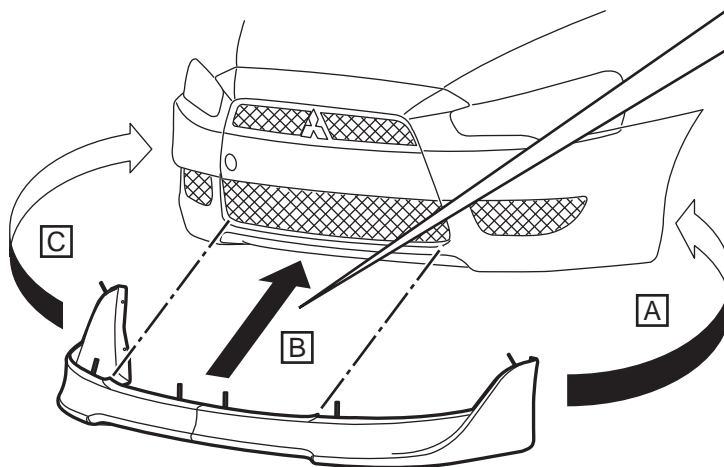
Align it in the order of **A** , **B** and **C** .

9

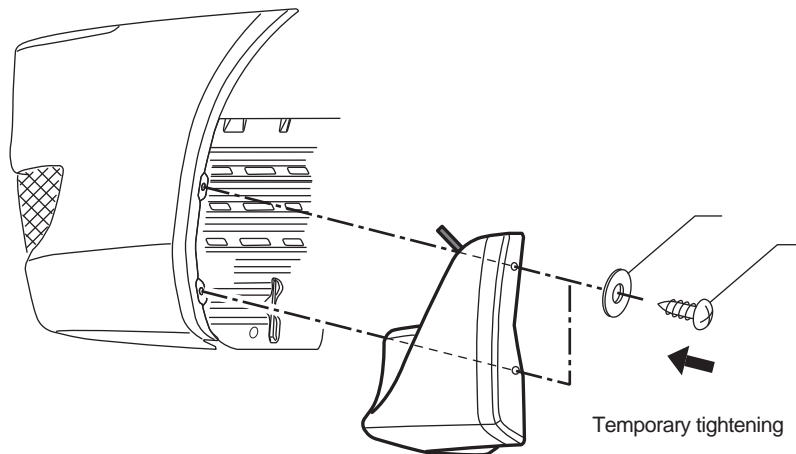


10


Remove the exfoliate paper in order from **A** to **F** ,
then press fit well.

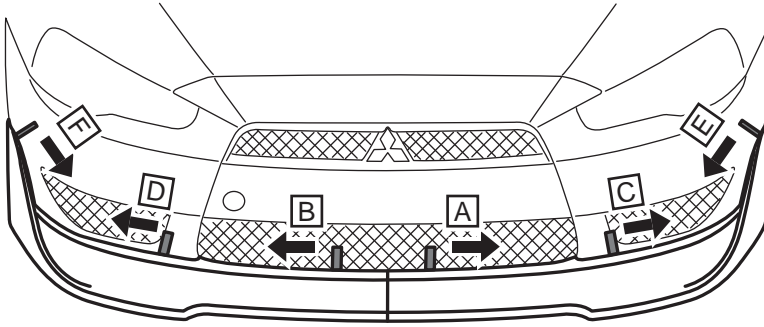


 **Note**

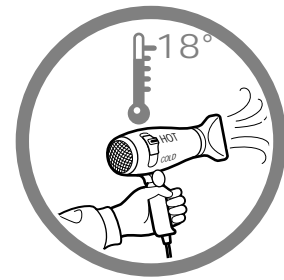


11

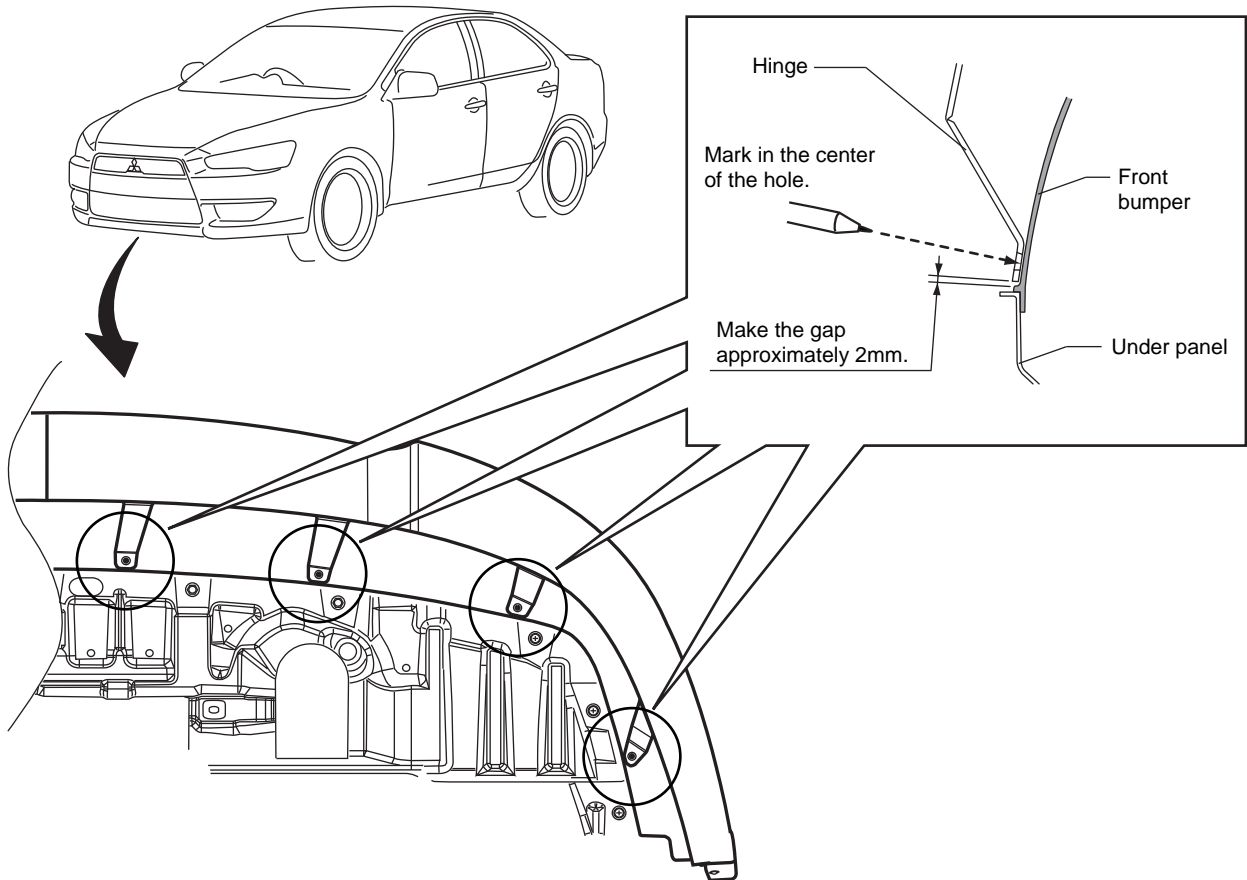


12

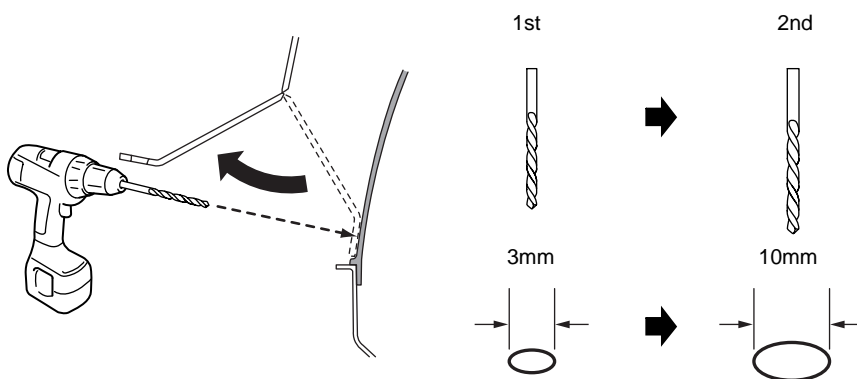


 **Note**

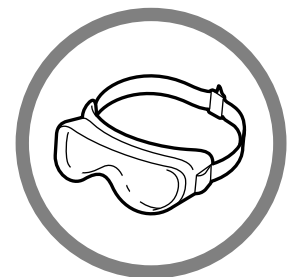


13

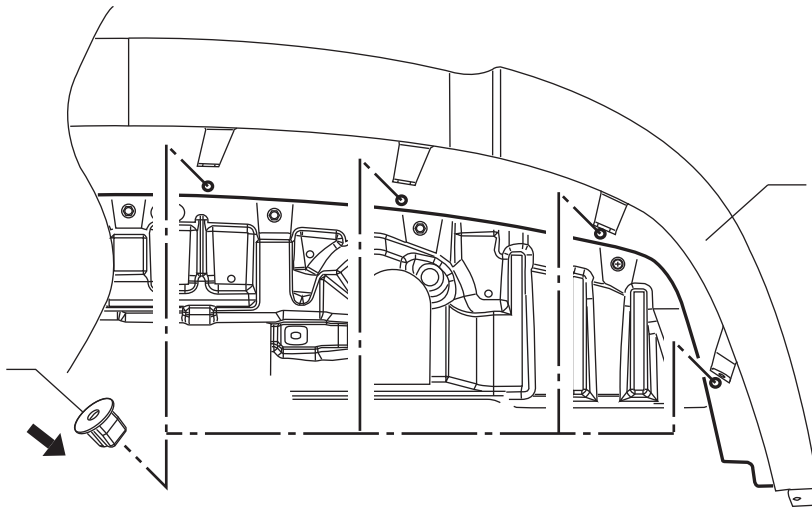

14

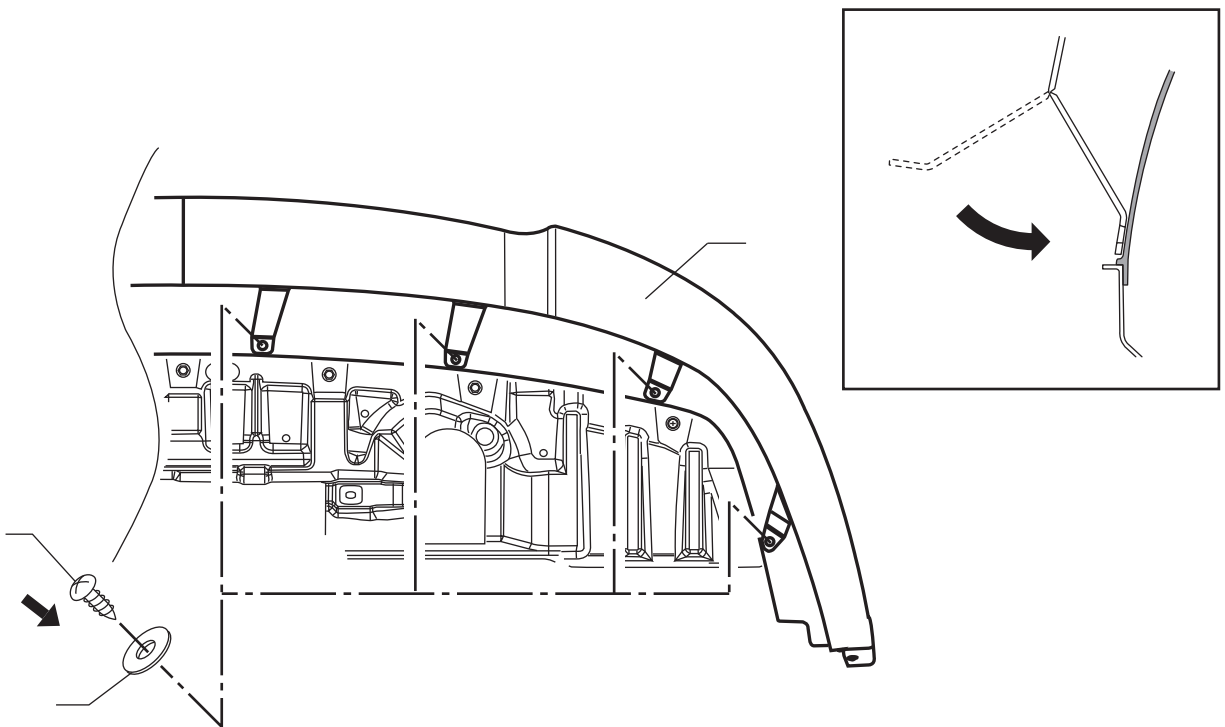


15

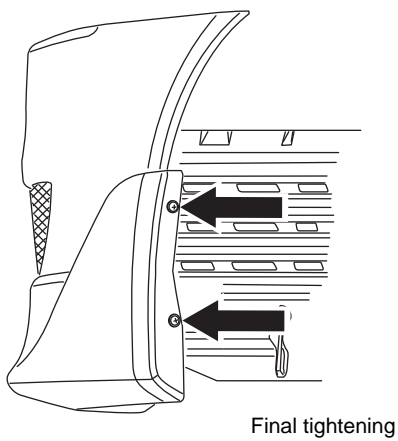


16

Required only for a vehicle equipped with front fog lamps.

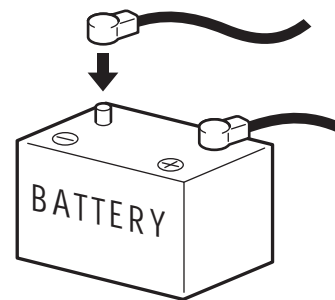


INSTALLATION PROCEDURES REAR AIRDAM


1 Lift up the vehicle.

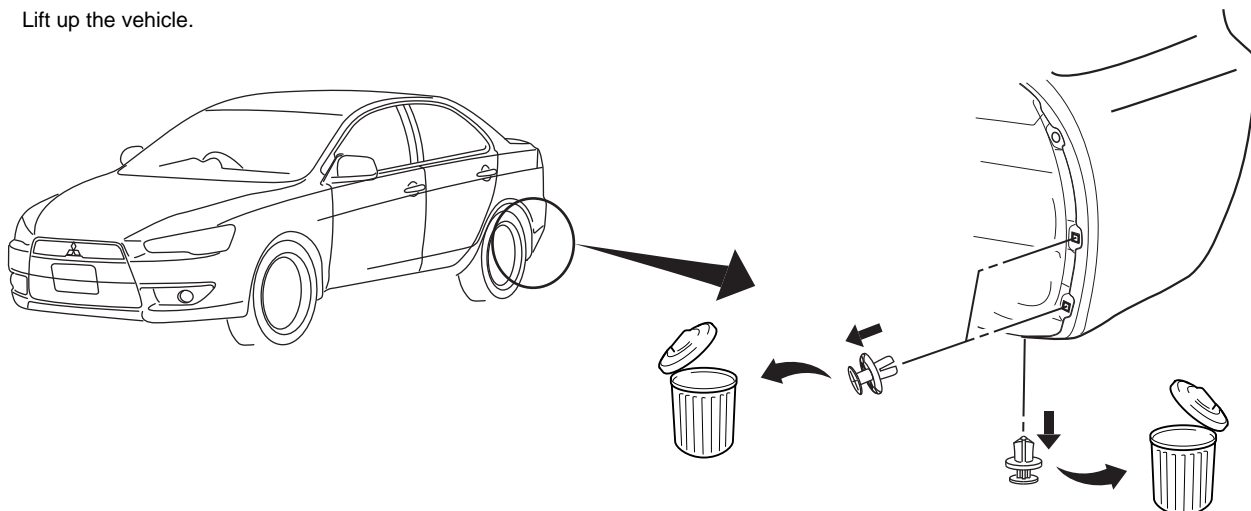


2

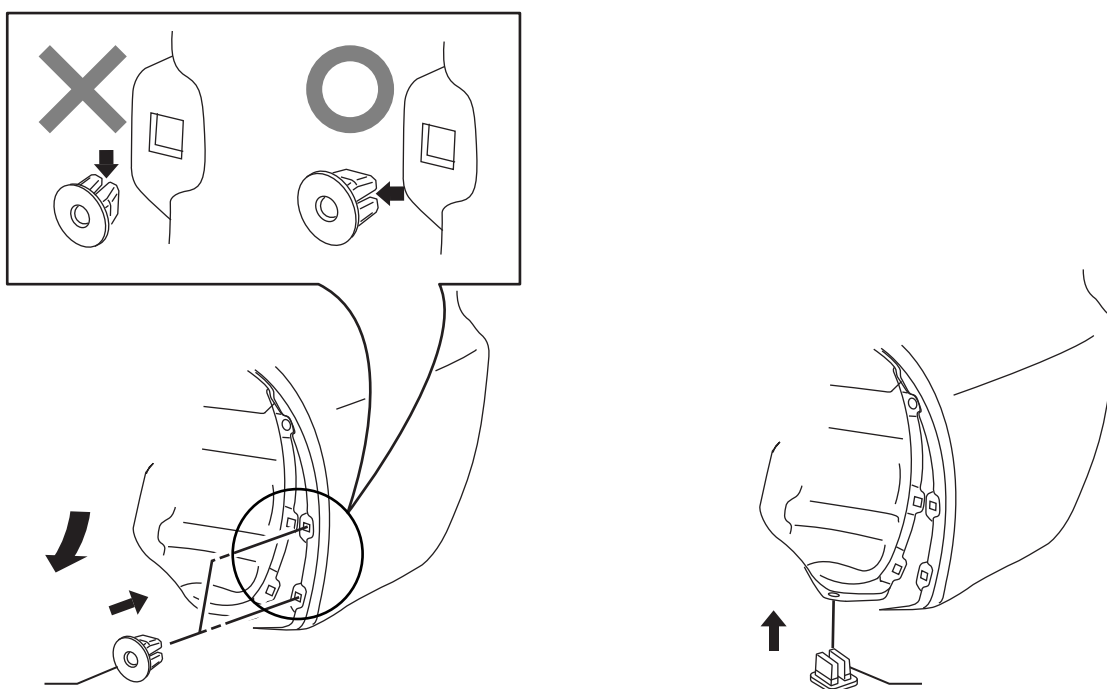


3

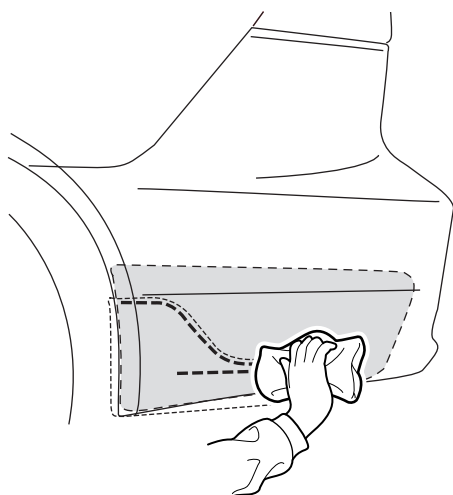

⚠ Caution

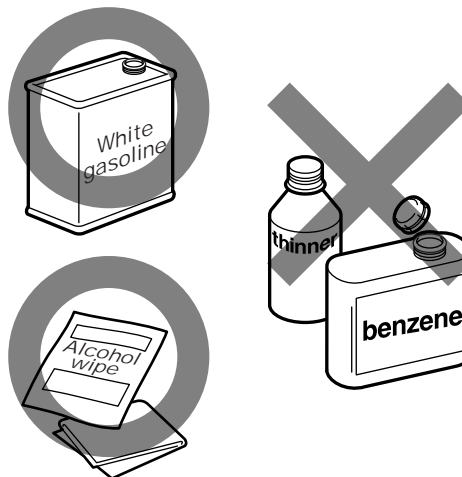


4

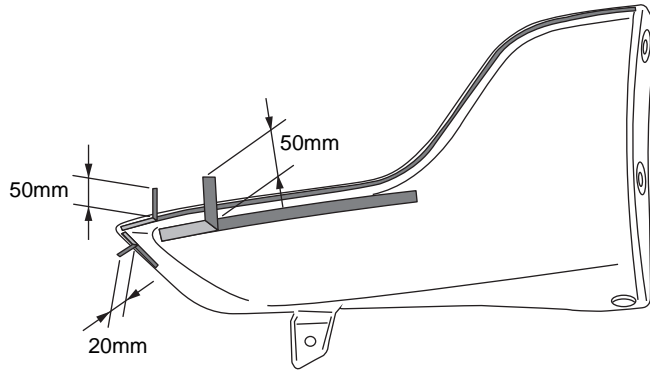


Peel and fold all the exfoliate paper outside the rear airdam while not removing them completely as shown above.


5

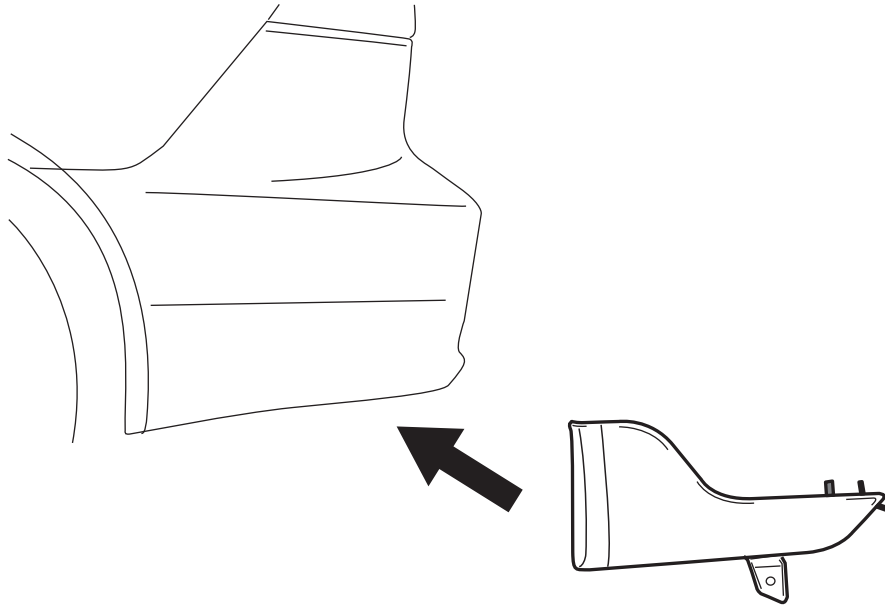



6

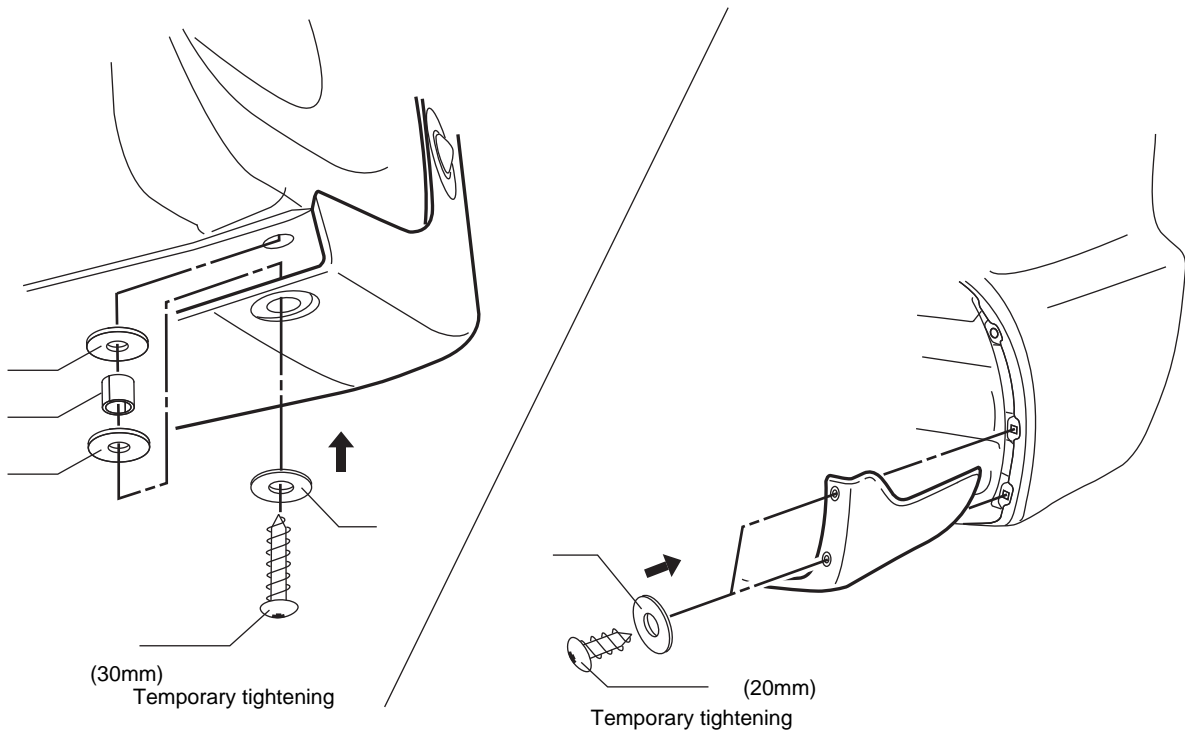


7

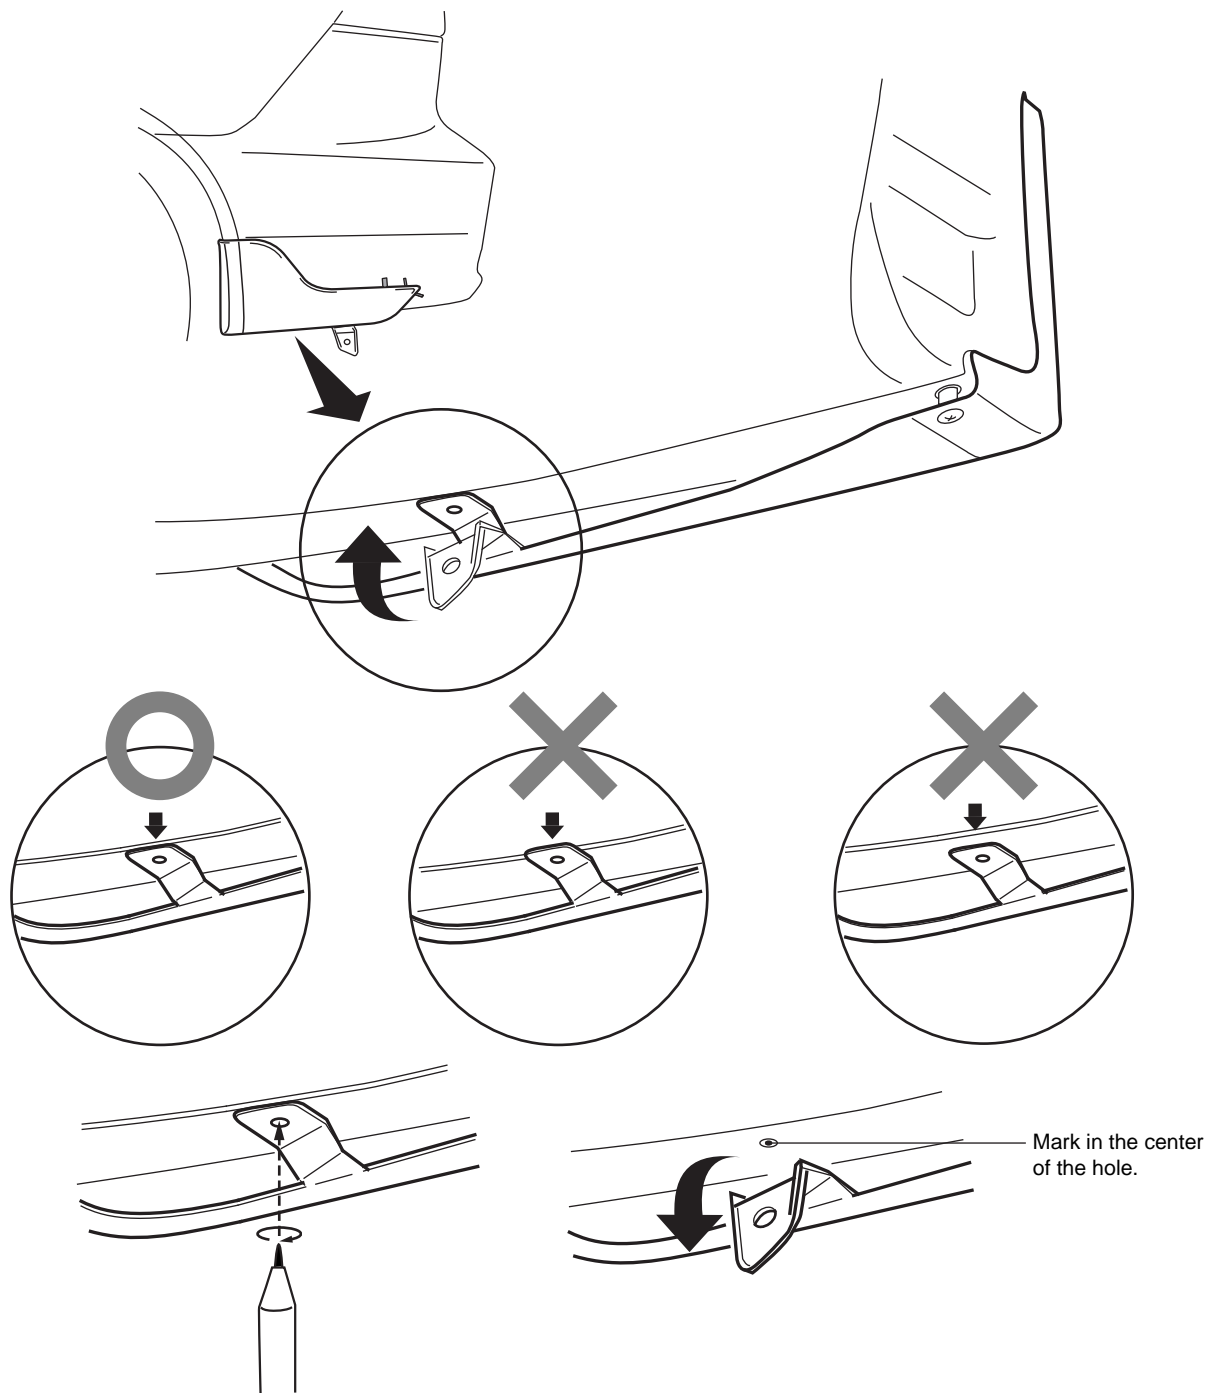


8

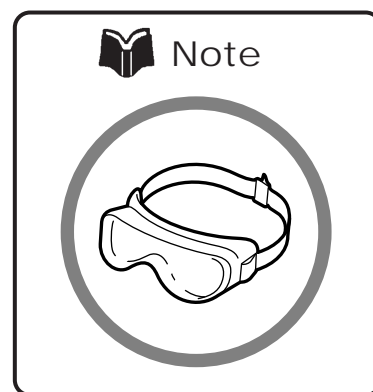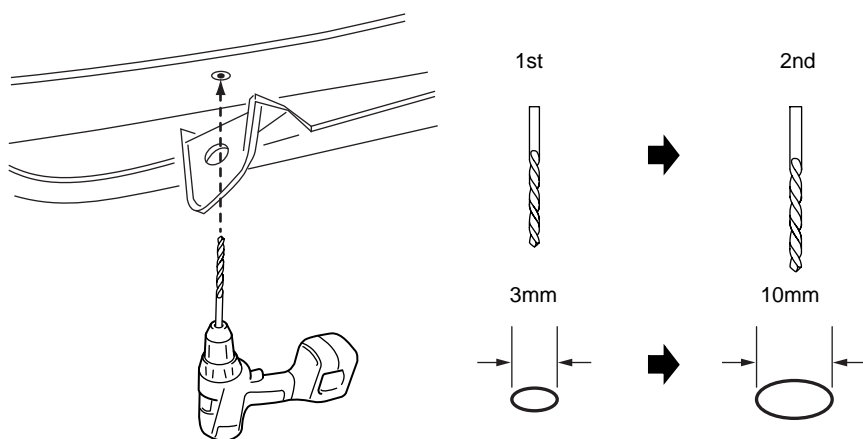


9

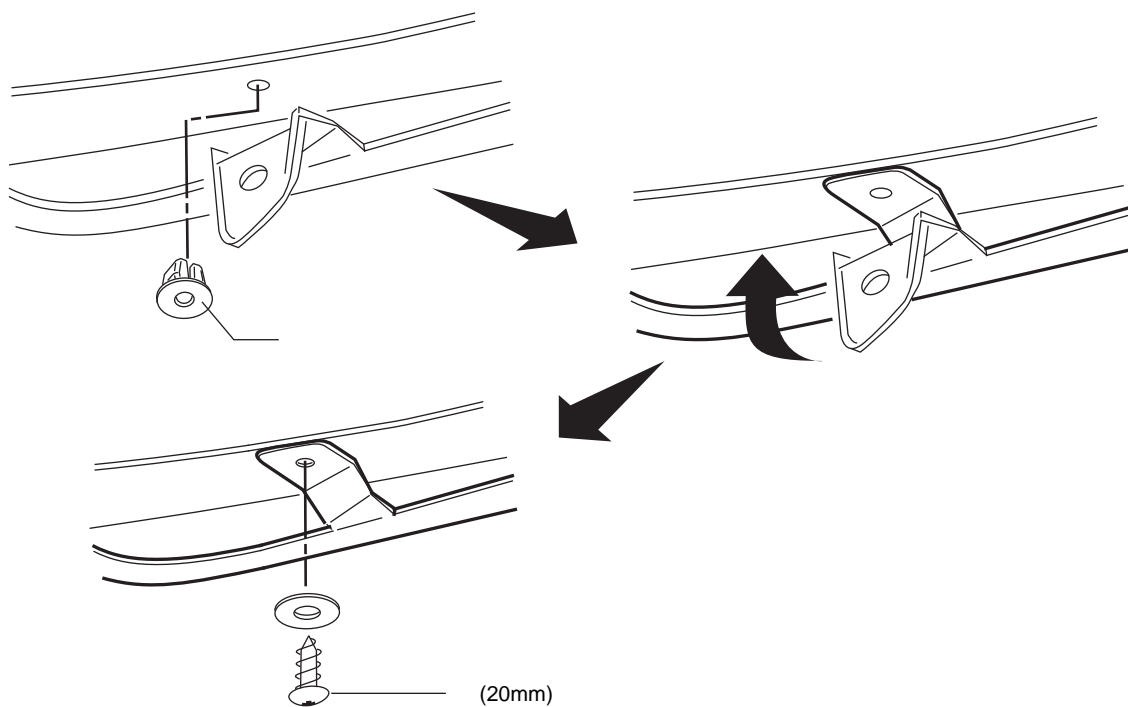


10

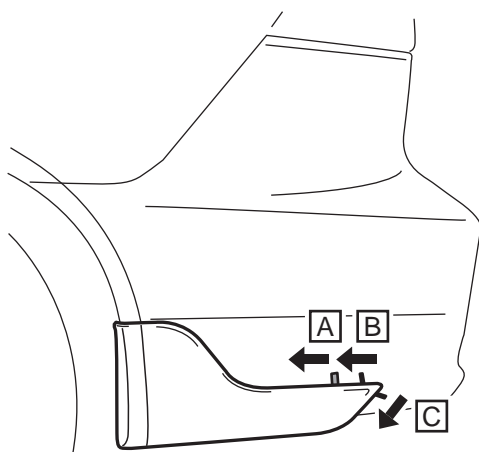

Remove the exfoliate paper in order from **A** to **C** , then press fit well.

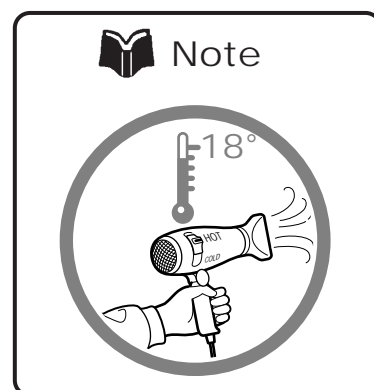

11

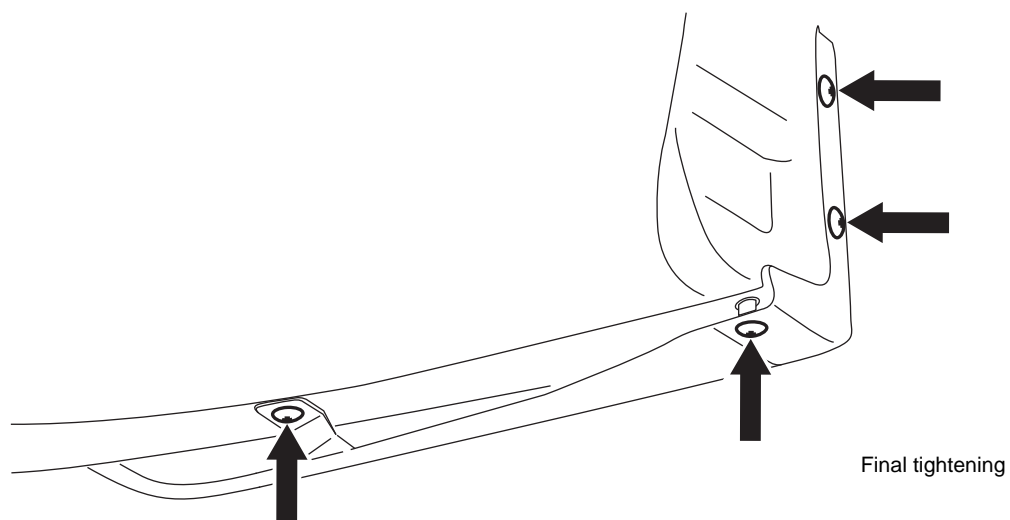

CHECKING AFTER INSTALLATION

24Hour




Operation check after installation





1. Check the installed condition for alignment, wobbliness, etc.
2. Check that each screw is securely fixed. If the screw loosens during the test drive, please tighten it more.
3. Check that the double-sided tape is securely applied.

CARE AND HANDLING

10km/h

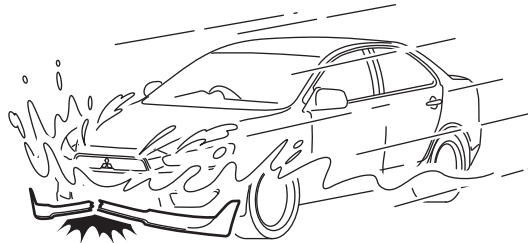

Gasoline
Light oil
Grease
Battery fluid
Brake oil
Engine oil
Alcohol

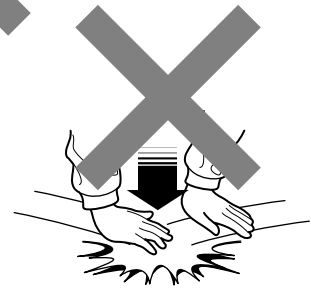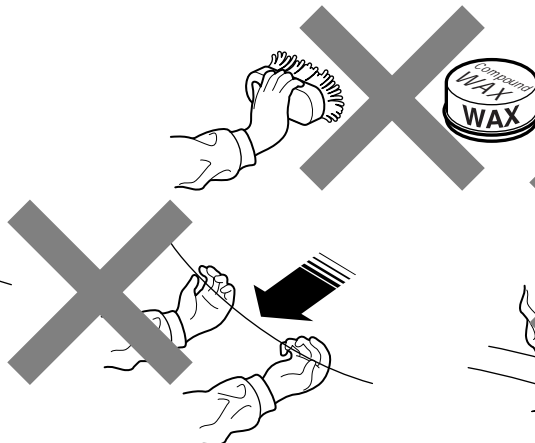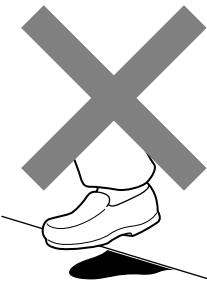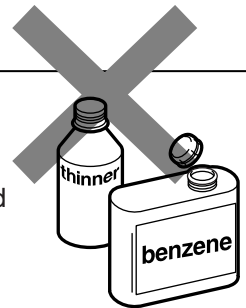

⚠ Caution

1. Check the vehicle if necessary to keep the proper condition of this product including the installation condition at all times.
2. When a malfunction occurs while driving after installing this product, stop the vehicle immediately and go to a workshop for an inspection.
3. When the normal condition cannot be maintained due deterioration, damages, etc., replace immediately.
4. This product may deteriorate faster than a standard part.
5. The original vehicle performance will not be improved by installing this product. Please drive carefully at all times.
6. When driving on a water-covered road and the front airdam or bumper is covered by water, considerably reduce the speed and drive slowly (less than 10km/h.)
If the speed is not reduced, the vehicle body such as the front airdam or bumper, etc. may be damaged.