

FUSIBLE LINK ④ <4B1, 4J1>
FUSIBLE LINK ⑥ <4N1>

RELAY BOX (FUSE BOX) (FUSE BF3)

IGNITION SWITCH (IG1) OR OSS-ECU (IG1)

FUSIBLE LINK ② <4B1, 4J1>
FUSIBLE LINK ⑫ <4N1>

NOTE
*1 : VEHICLES WITHOUT KOS
*2 : VEHICLES WITH KOS
*3 : LHD
*4 : RHD
*5 : VEHICLES FOR EUROPE
*6 : VEHICLES FOR RUSSIA, ARGENTINA AND SOUTH AFRICA
*7 : VEHICLES FOR SOUTH AFRICA
*8 : VEHICLES WITH AUTO LAMP

*9 : .ABS-ECU
.ACC/FCM-ECU
.ASC-ECU
.AS&G OFF SWITCH
.A/T CONTROL RELAY
.COMBINATION METER
.CORNER SENSOR/BACK SENSOR-ECU
.CVT CONTROL RELAY
.DC/DC CONVERTER (POWERTRAIN)
.EPS-ECU
.HAZARD INDICATOR ASSEMBLY
.HEATED SEAT RELAY
.HEATER CONTROLLER ASSEMBLY (A/C-ECU)

.KOS-ECU
.LDW-ECU
.NEUTRAL POSITION SWITCH
.PTC HEATER RELAY
.PRIMARY PULLEY SPEED SENSOR
.SECONDARY PULLEY SPEED SENSOR
.SELECTOR LEVER ASSEMBLY
.SONAR SWITCH
.STEERING WHEEL SENSOR
.SUNROOF MOTOR ASSEMBLY
.WATER LEVEL SWITCH

RELAY BOX (ENGINE COMPARTMENT)

FRONT FOG LAMP RELAY (A-21X)

ETACS-ECU

COLUMN-ECU

IGNITION SWITCH (IG1) OR OSS-ECU (IG1)

RELAY BOX (PASSENGER COMPARTMENT) FUSIBLE LINK AND FUSE

LIN DRIVE CIRCUIT

