



- .AUDIO SYSTEM
- .AUTOMATIC AIR CONDITIONER
- .BRAKE WARNING LAMP, FUEL FILTER WARNING LAMP, FUEL WARNING LAMP AND OIL PRESSURE WARNING LAMP
- .CENTRE DISPLAY
- .CHARGING SYSTEM
- .CRUISE CONTROL SYSTEM
- .DOOR AJAR WARNING BUZZER
- .ENGINE CONTROL SYSTEM
- .FRONT FOG LAMP
- .GLOW SYSTEM
- .HANDS-FREE INTERFACE SYSTEM
- .HBB, EBD, ABS AND ASTC
- .HEADLAMP
- .INVECS-II 5A/T
- .METER AND GAUGE
- .MMCS
- .REAR FOG LAMP
- .REAR SEAT ENTERTAINMENT SYSTEM
- .SEAT BELT WARNING BUZZER
- .SECURITY ALARM
- .SPARE CONNECTOR (FOR ACCESSORY)
- .SPARE CONNECTOR (FOR AUDIO)
- .SPARE CONNECTOR (FOR REAR DISPLAY)
- .SRS
- .SUNROOF
- .SUPER SELECT 4WD II SYSTEM
- .TAIL LAMP, POSITION LAMP, LICENCE PLATE LAMP AND LIGHTING MONITOR BUZZER
- .TURN-SIGNAL LAMP AND HAZARD WARNING LAMP
- .USB BOX
- .VANITY MIRROR LAMP
- .WINDSHIELD WIPER AND WASHER

- .FRONT FOG LAMP
- .HEADLAMP
- .HEADLAMP WASHER
- .SECURITY ALARM
- .TAIL LAMP, POSITION LAMP, LICENCE PLATE LAMP AND LIGHTING MONITOR BUZZER
- .WINDSHIELD WIPER AND WASHER
- .AUDIO SYSTEM
- .BRAKE WARNING LAMP, FUEL FILTER WARNING LAMP, FUEL WARNING LAMP AND OIL PRESSURE WARNING LAMP
- .CENTRE DISPLAY
- .CHARGING SYSTEM
- .CRUISE CONTROL SYSTEM
- .DOOR AJAR WARNING BUZZER
- .ENGINE CONTROL SYSTEM
- .FRONT FOG LAMP
- .GLOW SYSTEM
- .HBB, EBD, ABS AND ASTC
- .HEADLAMP
- .HEADLAMP AUTOMATIC LEVELLING SYSTEM
- .IMMOBILIZER SYSTEM
- .INVECS-II 5A/T
- .METER AND GAUGE
- .MMCS
- .REAR DIFFERENTIAL LOCK SYSTEM
- .REAR FOG LAMP
- .REVERSING SENSOR SYSTEM
- .SEAT BELT WARNING BUZZER
- .SECURITY ALARM
- .SPARE CONNECTOR (FOR AUDIO)
- .SPARE CONNECTOR (FOR TRAILER LAMPS)
- .SRS
- .SUPER SELECT 4WD II SYSTEM
- .TAIL LAMP, POSITION LAMP, LICENCE PLATE LAMP AND LIGHTING MONITOR BUZZER
- .TURN-SIGNAL LAMP AND HAZARD WARNING LAMP
- .WINDSHIELD WIPER AND WASHER

