

SERVICE BULLETIN

AFTERSALES SERVICE OFFICE, MITSUBISHI MOTORS CORPORATION

PURPOSE: INFORMATION ISSUE NO.: MSB-07E54-002

SUBJECT: CAUTIONARY INSTRUCTIONS FOR CHANGING ETACS-ECU CODING DATA

GROUP: CHASSIS ELECTRICAL

DATE: 2007-03-05

<model>(M/Y> (EUR) 07
OUTLANDER (GS45X)(CW0W)

1. Description:

The cautionary instructions for changing ETACS-ECU coding data are added in the applicable Workshop Manual. This Service Bulletin contains the added cautionary instructions.

2. Applicable Manual:

Manual	Pub. No.	Title (Info-ID)	Attachment
2007 OUTLANDER Workshop Manual CD-ROM	CGXE07E1-CD (English) CGXF07E1-CD (French) CGXG07E1-CD (German) CGXS07E1-CD (Spanish)	Coding List (M001-01-500-07800-01)	Attachment 1, 2

CODING LIST

Before troubleshooting, check that the coding data written into the engine-ECU and ETACS-ECU are normal. If they are not the same as the initial settings, various functions and systems do not work normally.

VARIANT CODING

⚠ CAUTION

The items marked with *3 are actually installed to a vehicle but their initial settings are "Not present." This is because the items do not adapt CAN, and does not indicate abnormal coding data

The coding data can be checked by operating M.U.T.-III.

<Added>

⚠ CAUTION

With the ETACS functions being customised, if any of the ETACS-ECU variant coding and option coding items are changed, the customised contents are reset. In such case, the functions need to be recustomised.

OPTION CODING

⚠ CAUTION

If there is any item indicated by the option coding after equipment change, set ETACS-ECU so that the option coding data corresponds with the equipment content. Pay attention to that the concerned functions and systems do not work normally if the setting does not correspond with the equipment.

The ETACS-ECU option coding data can be checked or changed by operating M.U.T.-III.

- · How to check option coding data
 - 1. Connect the M.U.T.-III. Refer to .
 - Select "ETACS" on the system selection screen.
 - 3. Select "Coding."
 - 4. Select "Option Coding Information."
 - Check the displayed option coding information.
- · How to change option coding data
 - 1. Connect the M.U.T.-III. Refer to .
 - Select "ETACS" on the system selection screen.
 - 3. Select "Coding."
 - 4. Select "Option Coding."
 - Change to correct option coding data.

<Added>

⚠ CAUTION

With the ETACS functions being customised, if any of the ETACS-ECU option coding items are changed, the customised contents are reset. In such case, the functions need to be recustomised.