


PURPOSE : INFORMATION	ISSUE NO. : MSB-07E11-010B	DATE : 2008-04-05
SUBJECT : REMOVAL SERVICE POINTS FOR EXHAUST TAIL PIPE DIFFUSER	<div> <div>&lt;MODEL&gt; (EUR/RUSSIA) OUTLANDER (GS45X)(CW0W)</div> <div>&lt;M/Y&gt; 07-</div> </div>	
GROUP : ENGINE		

## 1. Description:

Since the exhaust main muffler and the exhaust tail pipe diffuser for the vehicles equipped with the 6B3, BSY and 4HN engine are supplied separately, the removal service points for the exhaust tail pipe diffuser are established. This Service Bulletin contains the new procedures.

\* For Russia, only the vehicles equipped with the 6B3 engine are applicable.

Engine model	Destination
6B3	All destinations
BSY	Destinations except Russia
4HN	Destinations except Russia

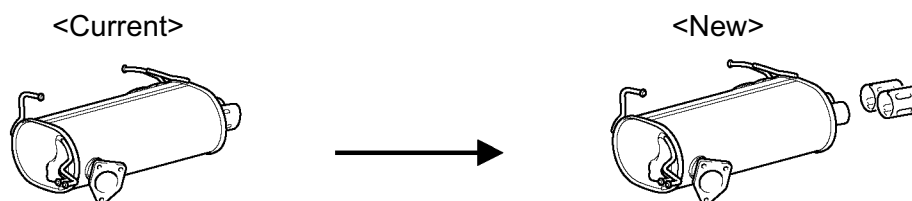

## 2. Applicable Manuals:

### <RUSSIA>

Underneath Manual	Underneath Pub. No.	Title (Info-ID)	Attachment
2007 OUTLANDER Workshop Manual	N/A	Exhaust Pipe and Main Muffler Removal and Installation (M151-00-870-14560-00)	Attachment 1, 2

### <EUR>

Manual	Pub. No.	Title (Info-ID)	Attachment
2008 OUTLANDER Workshop Manual	CGXE08E2-CD (English)	Exhaust Pipe and Main Muffler Removal and Installation <6B3> (M151-00-870-17570-00)	Attachment 1, 2
	CGXS08E2-CD (Spanish)	Exhaust Pipe and Main Muffler Removal and Installation <BSY> (M151-00-540-08280-00)	Attachment 3, 4
	CGXF08E2-CD (French)	Exhaust Pipe and Main Muffler Removal and Installation <4HN> (M151-00-540-08170-00)	Attachment 5, 6
	CGXG08E2-CD (German)		

### 3. Details:

Attachment 1


## INTAKE AND EXHAUST EXHAUST PIPE AND MAIN MUFFLER

### EXHAUST PIPE AND MAIN MUFFLER

#### REMOVAL AND INSTALLATION <6B3>

M1151008701939

<Old>

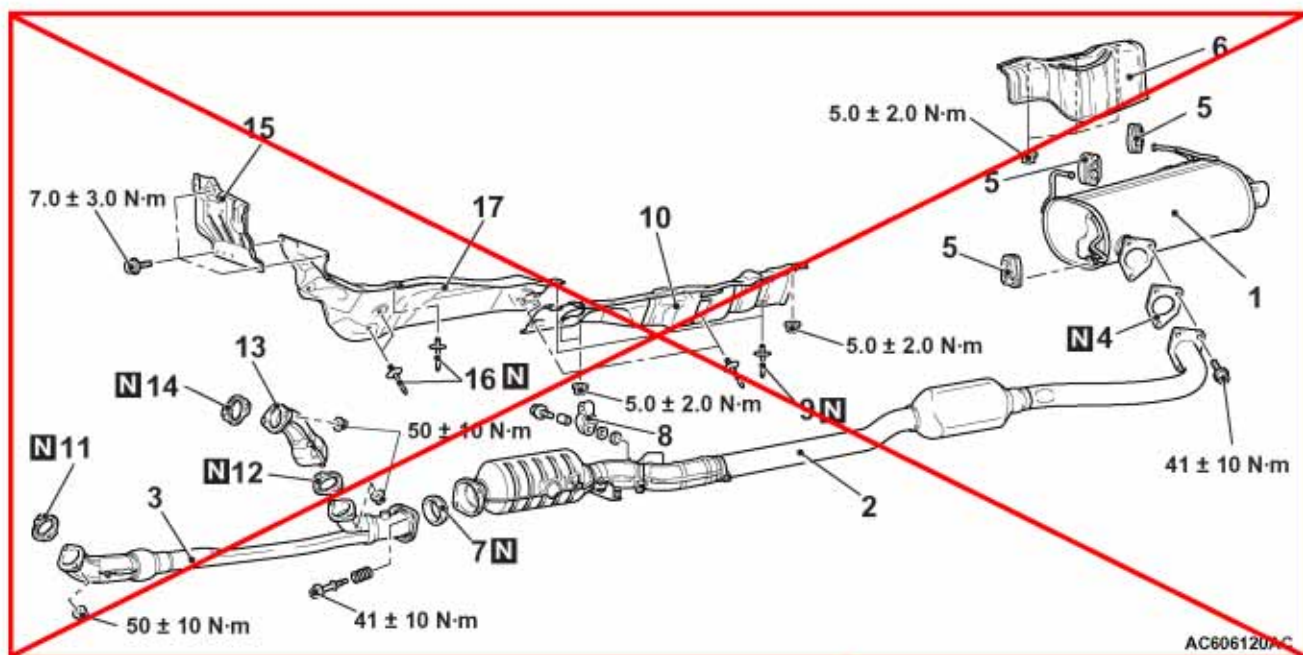

AC606120/C

#### Exhaust main muffler and rear floor panel heat protector removal steps

1. Exhaust main muffler
4. Exhaust pipe gasket
5. Exhaust muffler hanger
18. Exhaust tail pipe diffuser

<Added>

<<A>>

6. Rear floor panel heat protector
- Centre exhaust pipe and front floor panel rear heat protector removal steps

2. Centre exhaust pipe
4. Exhaust pipe gasket
7. Seal ring
8. Exhaust muffler hanger
9. Rivet
10. Front floor rear panel heat protector

<<B>> >>A<<

<New>

Attachment 2 - Illustration

#### Front exhaust pipe and front floor panel front heat protector removal steps

3. Front exhaust pipe
7. Seal ring
11. Exhaust pipe gasket
12. Exhaust pipe gasket
13. Front exhaust pipe (RH)
14. Exhaust pipe gasket
15. Dash panel heat protector
16. Rivet
17. Front floor front panel heat protector


<<B>> >>A<<

<Added>

Attachment 2 - Removal service points


# INTAKE AND EXHAUST EXHAUST PIPE AND MAIN MUFFLER

&lt;New&gt;

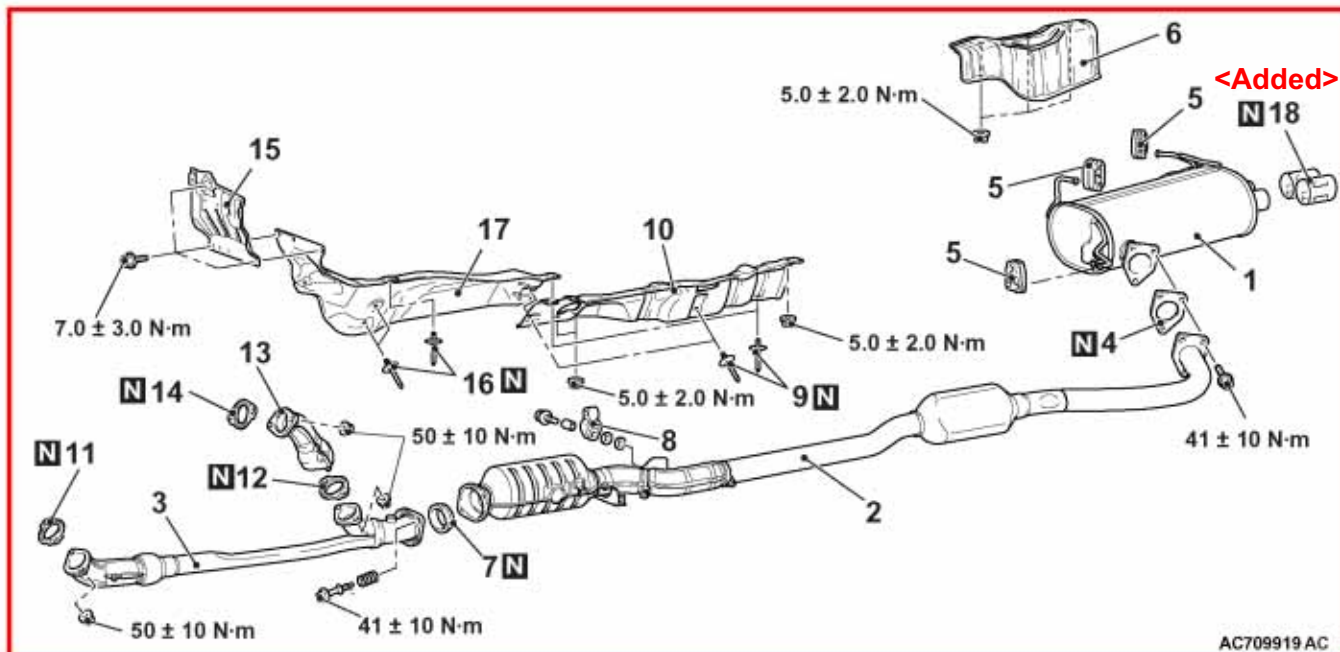

## REMOVAL SERVICE POINTS

### <<A>> EXHAUST TAIL PIPE DIFFUSER REMOVAL

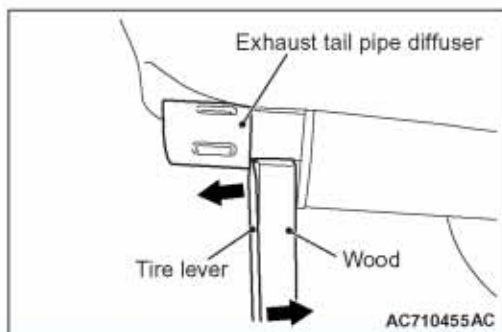

Insert the wood and tire lever between exhaust tail pipe diffuser and exhaust main muffler. And then turn the tire lever and remove exhaust tail pipe diffuser.

&lt;Added&gt;


## 15-6

INTAKE AND EXHAUST  
EXHAUST PIPE AND MAIN MUFFLER

## REMOVAL AND INSTALLATION &lt;BSY&gt;

M1151005400895

&lt;Old&gt;

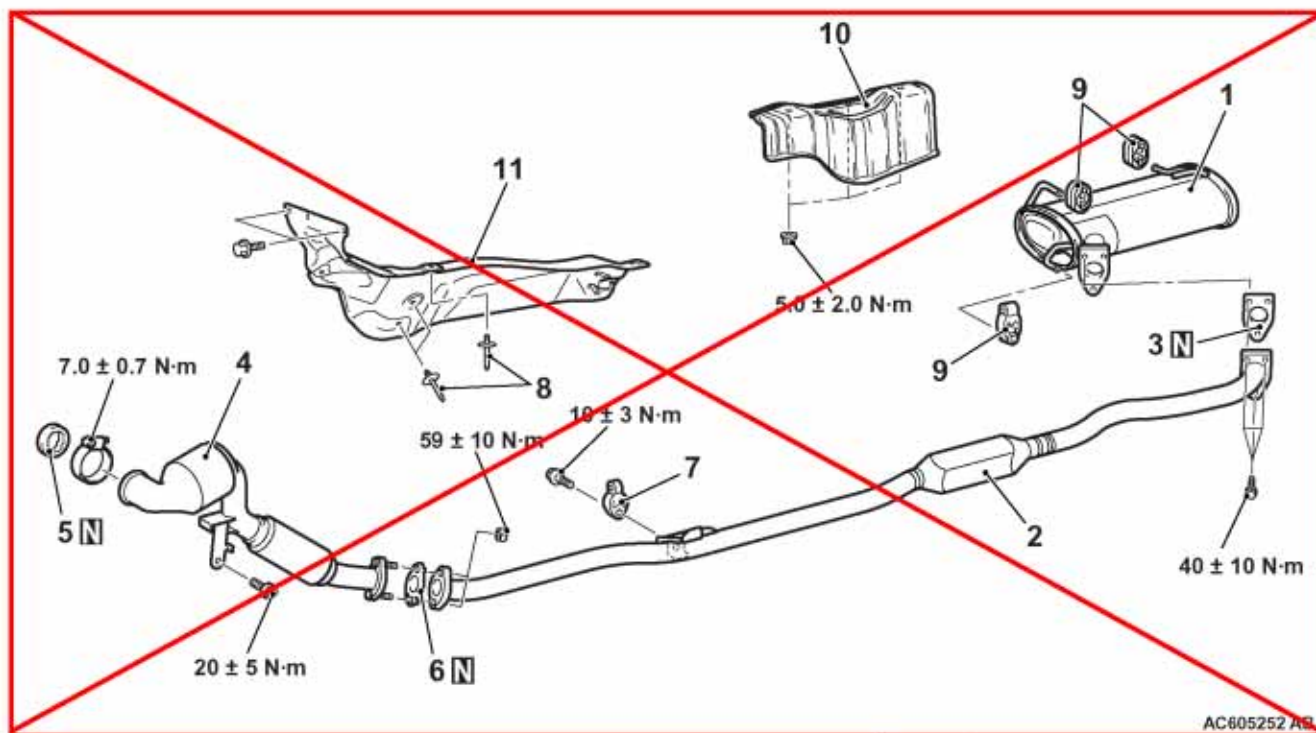

&lt;Added&gt;

&lt;&lt;A&gt;&gt;

**Exhaust main muffler and rear floor panel heat protector removal steps**

1. Exhaust main muffler
3. Exhaust pipe gasket
12. Exhaust tail pipe diffuser
9. Exhaust muffler hanger
10. Rear floor panel heat protector

**Centre exhaust pipe and front floor panel heat protector removal steps**

2. Centre exhaust pipe
3. Exhaust pipe gasket

&lt;New&gt;

Attachment 4 -  
Illustration**Centre exhaust pipe and front floor panel heat protector removal steps (Continued)**


6. Exhaust pipe gasket
  7. Exhaust muffler hanger
  8. Rivet
  11. Front floor panel heat protector
- Catalytic converter assembly removal steps**
4. Catalytic converter assembly
  5. Seal ring
  6. Exhaust pipe gasket

&lt;Added&gt;

Attachment 4 -  
Removal service points


# INTAKE AND EXHAUST EXHAUST PIPE AND MAIN MUFFLER

&lt;New&gt;

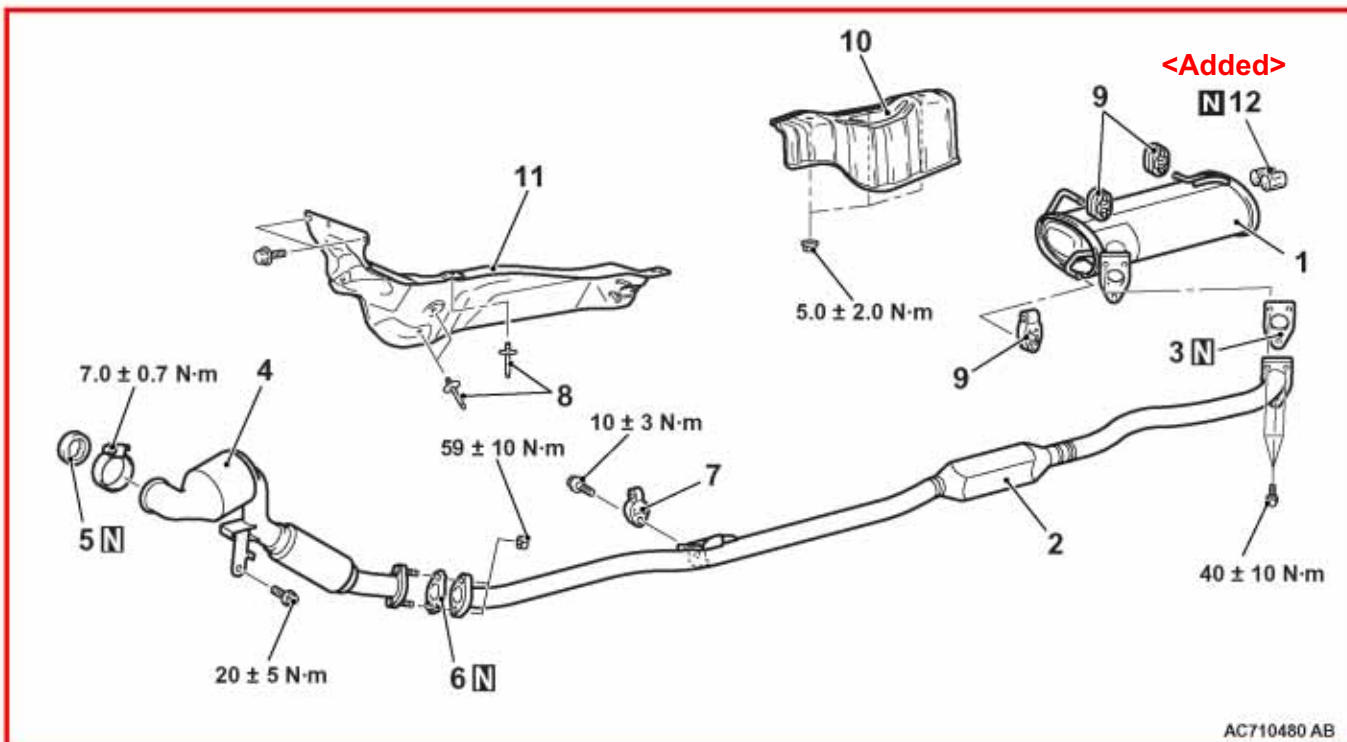

## REMOVAL SERVICE POINTS

### <<A>> EXHAUST TAIL PIPE DIFFUSER REMOVAL

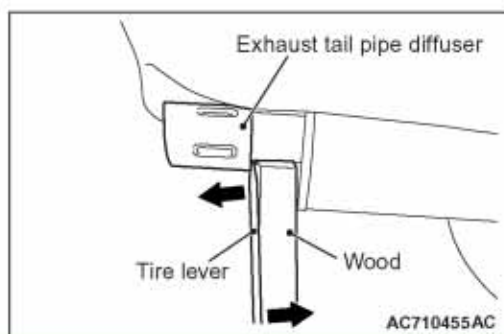

Insert the wood and tire lever between exhaust tail pipe diffuser and exhaust main muffler. And then turn the tire lever and remove exhaust tail pipe diffuser.

&lt;Added&gt;




## 15-8

INTAKE AND EXHAUST  
EXHAUST PIPE AND MAIN MUFFLER

## REMOVAL AND INSTALLATION &lt;4HN&gt;

M1151005400903

&lt;Old&gt;

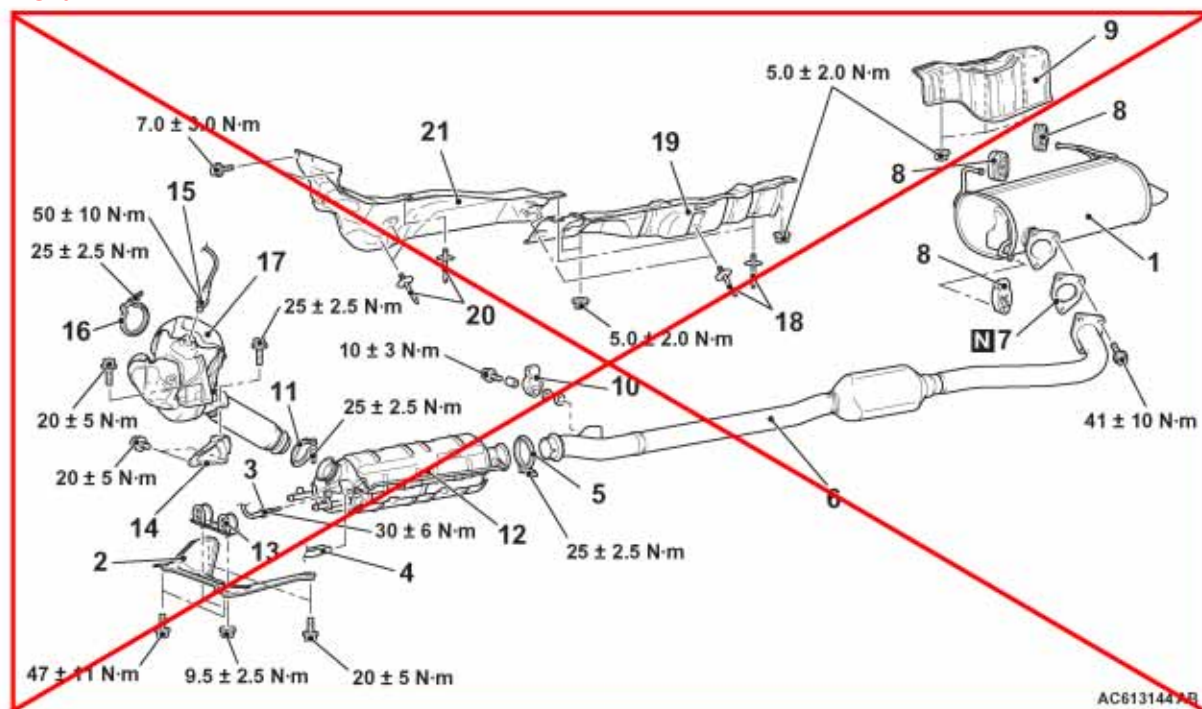Exhaust main muffler and rear  
floor panel heat protector  
removal steps

&lt;Added&gt;

&lt;&lt;A&gt;&gt;

1. Exhaust main muffler
  7. Exhaust pipe gasket
  22. Exhaust tail pipe diffuser
  8. Exhaust muffler hanger
  9. Rear floor panel heat protector
- Centre exhaust pipe and front  
floor panel rear heat protector  
removal steps**
5. Clamp
  6. Centre exhaust pipe
  7. Exhaust pipe gasket
  10. Exhaust muffler hanger
  18. Rivet
  19. Front floor panel heat protector

&lt;&lt;B&gt;&gt; &gt;&gt;A&lt;&lt;

&lt;New&gt;

Attachment 6 -  
IllustrationDPF assembly, catalytic  
converter assembly and front  
floor panel front heat protector  
removal steps

2. Backbone brace
3. Catalyst temperature sensor
4. Vacuum hose connection
5. Clamp
11. Clamp
12. DPF assembly
13. Hanger bracket assembly
14. Catalytic converter bracket
- Transfer assembly (Refer to GROUP 22A – Transfer Assembly).
15. Oxygen sensor
16. Clamp
17. Catalytic converter assembly
20. Rivet
21. Front floor front panel heat protector


&lt;&lt;B&gt;&gt; &gt;&gt;A&lt;&lt;

&lt;Added&gt;

Attachment 6 -  
Removal service points


# INTAKE AND EXHAUST EXHAUST PIPE AND MAIN MUFFLER

&lt;New&gt;

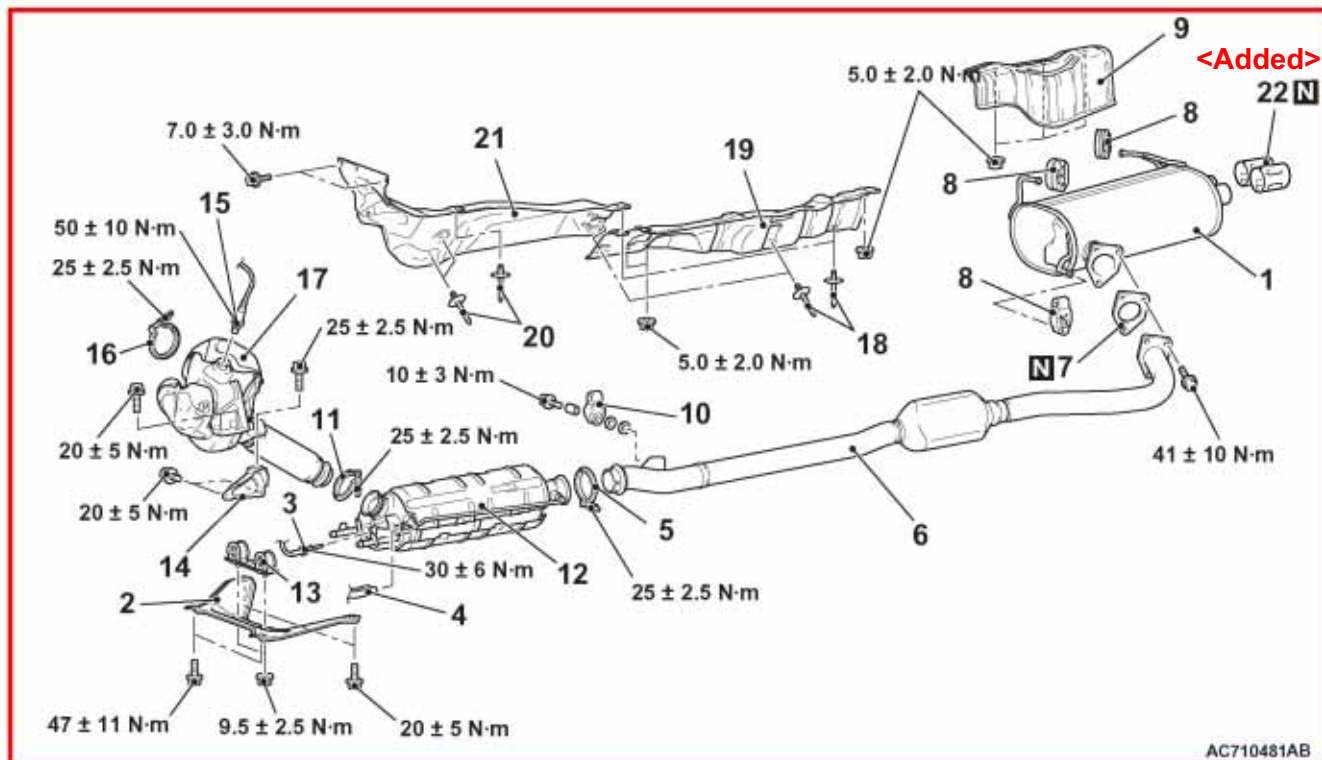

## REMOVAL SERVICE POINTS

### <<A>> EXHAUST TAIL PIPE DIFFUSER REMOVAL

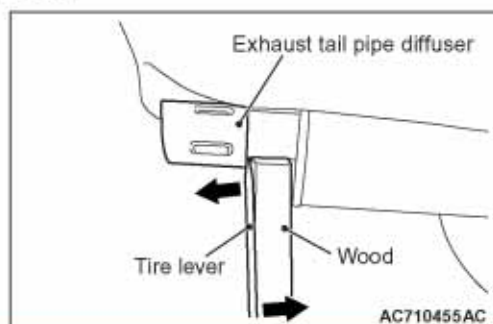

Insert the wood and tire lever between exhaust tail pipe diffuser and exhaust main muffler. And then turn the tire lever and remove exhaust tail pipe diffuser.

&lt;Added&gt;