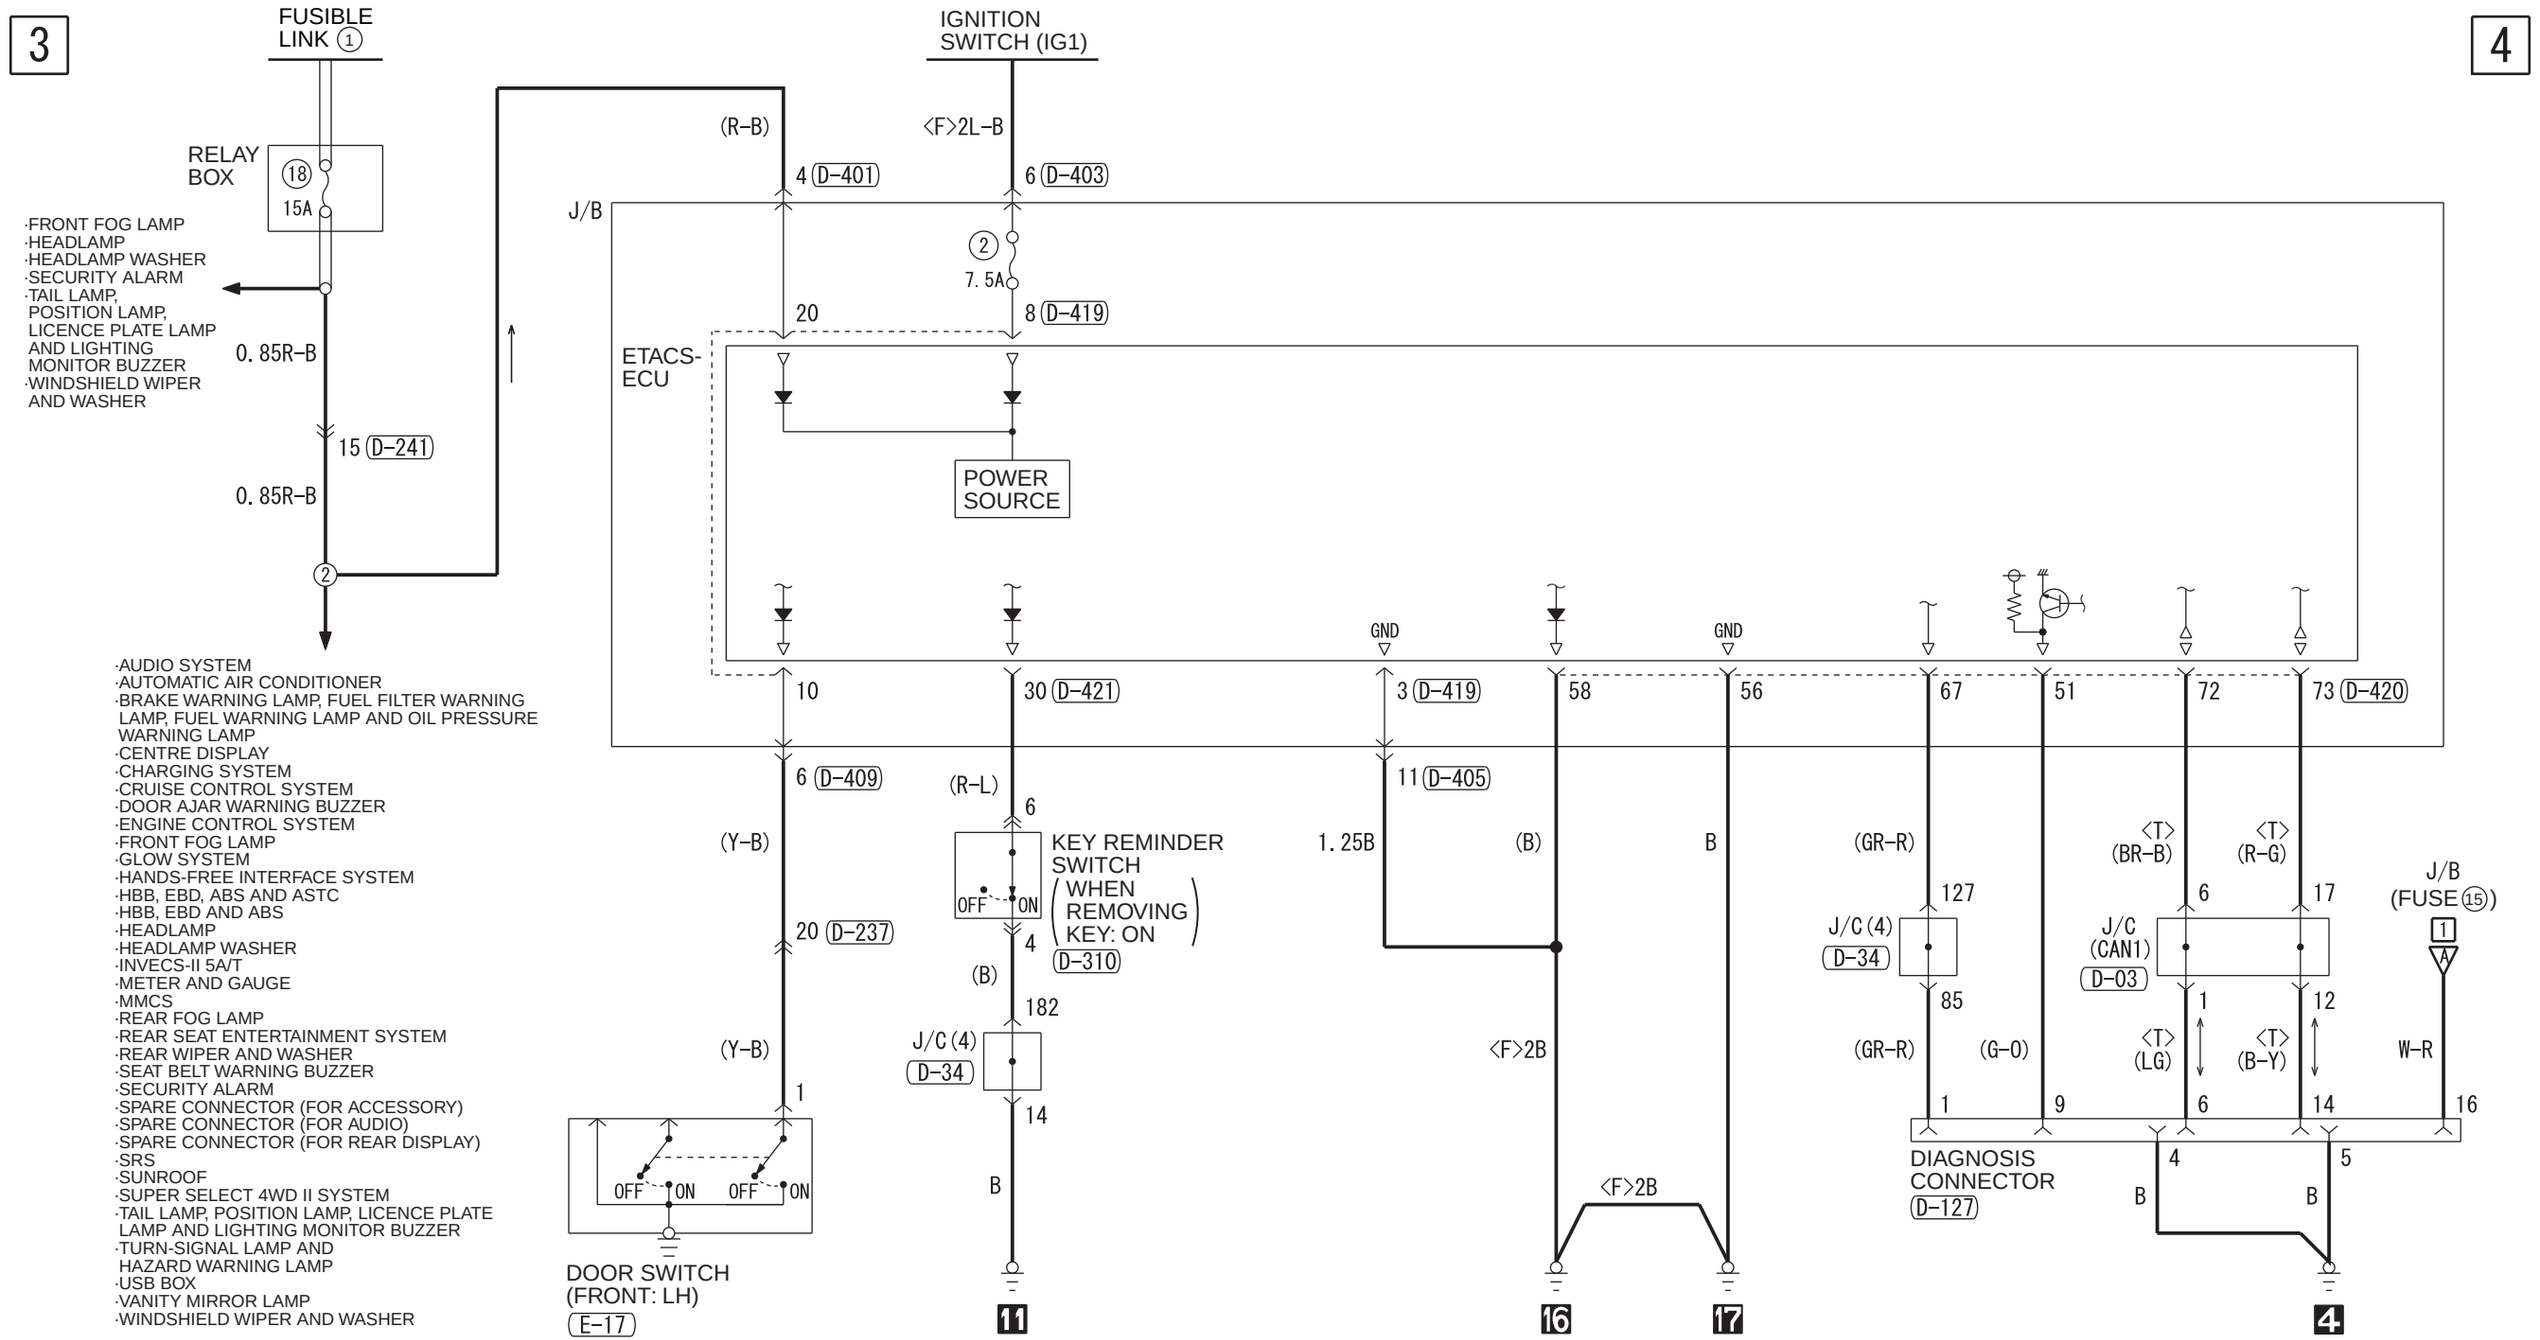
3
4
FUSIBLE LINK ①
IGNITION SWITCH (IG1)
RELAY BOX
⑱
15A
·FRONT FOG LAMP
·HEADLAMP
·HEADLAMP WASHER
·SECURITY ALARM
·TAIL LAMP, POSITION LAMP, LICENCE PLATE LAMP AND LIGHTING MONITOR BUZZER
·WINDSHIELD WIPER AND WASHER
0.85R-B
15 (D-241)
0.85R-B
②
(R-B)
4 (D-401)
<F>2L-B
6 (D-403)
J/B
②
7.5A
20
8 (D-419)
ETACS-ECU
POWER SOURCE
GND
GND
10
30 (D-421)
3 (D-419)
58
56
67
51
72
73 (D-420)
·AUDIO SYSTEM
·AUTOMATIC AIR CONDITIONER
·BRAKE WARNING LAMP, FUEL FILTER WARNING LAMP, FUEL WARNING LAMP AND OIL PRESSURE WARNING LAMP
·CENTRE DISPLAY
·CHARGING SYSTEM
·CRUISE CONTROL SYSTEM
·DOOR AJAR WARNING BUZZER
·ENGINE CONTROL SYSTEM
·FRONT FOG LAMP
·GLOW SYSTEM
·HANDS-FREE INTERFACE SYSTEM
·HBB, EBD, ABS AND ASTC
·HBB, EBD AND ABS
·HEADLAMP
·HEADLAMP WASHER
·INVECS-II 5A/T
·METER AND GAUGE
·MMCS
·REAR FOG LAMP
·REAR SEAT ENTERTAINMENT SYSTEM
·REAR WIPER AND WASHER
·SEAT BELT WARNING BUZZER
·SECURITY ALARM
·SPARE CONNECTOR (FOR ACCESSORY)
·SPARE CONNECTOR (FOR AUDIO)
·SPARE CONNECTOR (FOR REAR DISPLAY)
·SRS
·SUNROOF
·SUPER SELECT 4WD II SYSTEM
·TAIL LAMP, POSITION LAMP, LICENCE PLATE LAMP AND LIGHTING MONITOR BUZZER
·TURN-SIGNAL LAMP AND HAZARD WARNING LAMP
·USB BOX
·VANITY MIRROR LAMP
·WINDSHIELD WIPER AND WASHER
6 (D-409)
(Y-B)
20 (D-237)
(Y-B)
1
OFF ON OFF ON
DOOR SWITCH (FRONT: LH)
(E-17)
(R-L)
6
OFF ON
KEY REMINDER SWITCH (WHEN REMOVING KEY: ON)
(D-310)
4
(B)
182
J/C (4)
(D-34)
14
B
11
11 (D-405)
1.25B
(B)
B
<F>2B
<F>2B
16
17
(GR-R)
127
J/C (4)
(D-34)
85
(GR-R)
(G-O)
<T> (BR-B)
<T> (R-G)
6
17
J/C (CAN1)
(D-03)
1
12
<T> (LG)
<T> (B-Y)
J/B (FUSE ⑮)
1
A
W-R
1
9
6
14
16
DIAGNOSIS CONNECTOR
(D-127)
4
5
B
B
4
D-03
MU801516
D-34
Refer to J/C circuit
D-127
FRONT SIDE
MU803797
D-237
D-409
D-419
J/B SIDE
D-420
(MU803766)
D-241
D-310
MU801547
D-401
MU801857
D-403
MU801331
D-405
D-421
(MU803765)
E-17
(MU801536)
HBB15E19BC