


# PAJERO / MONTERO (Long Body) CARGO ROOM COVER MZ360178EX INSTALLATION AND HANDLING INSTRUCTIONS

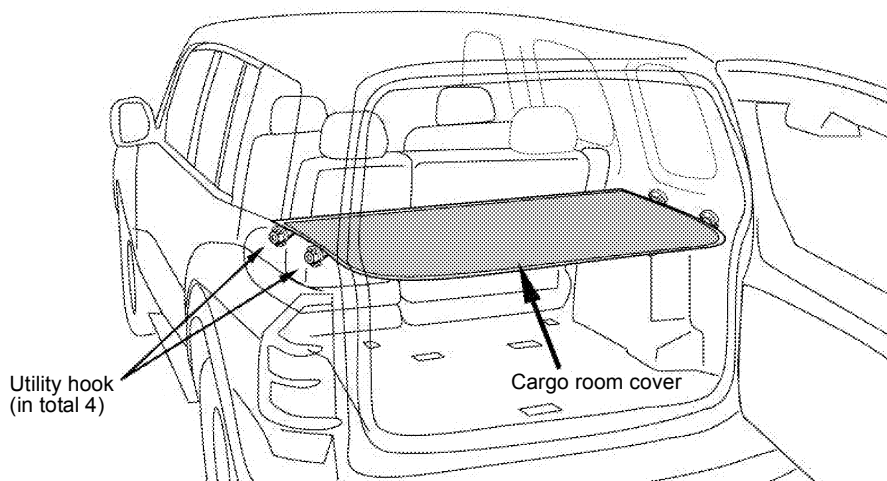

## Note

- This product cannot be installed on vehicles with factory-fitted cargo blind (rear shelf).

Thank you for purchasing the Mitsubishi Genuine Accessory.

To install and use the product correctly with proper knowledge of it, read this publication carefully.

Keep this publication for reference when maintenance is required.

## Attention

- This publication gives precautionary instructions in the boxes titled as follows.  
Read through these instructions thoroughly.



## Caution

Describes precautions that should be observed in order to prevent injury or damage to the vehicle or its components, which may occur if sufficient care is not taken.



## Note


Provides additional information that facilitates installation work.

- Failure to follow these instructions not only prevents the product from working properly but may lead to trouble with the vehicle. Be sure to follow all instructions carefully.
- If there is anything unclear about the installation, handling and/or usage of the product, contact your Mitsubishi Motors dealer for clarification.
- Mitsubishi Motors Corporation is not responsible for any defects or difficulties caused by or resulting from the failure to follow given instructions.
- We recommend you to have the installation performed at an authorized Mitsubishi Motors dealer.

To the dealer:

Be sure that the customer receives this publication.

## ■ TOOLS (Make the following tools ready for use.)

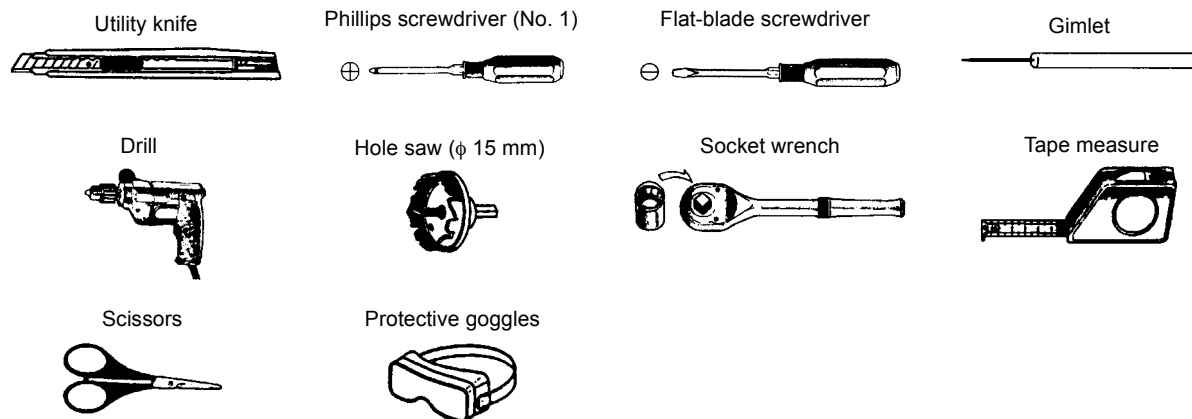

## ■ COMPONENTS (Make sure that all of the following components were included in the kit.)

<p>① Cargo room cover: 1</p>			
<p>② Hook: 4</p>	<p>③ Washer: 4</p>	<p>④ Inner sleeve: 4</p>	<p>⑤ Screw (M6 × 65): 2</p> <p>65 mm</p>
<p>⑥ Pipe spacer (L = 38): 2</p> <p>38 mm</p>	<p>⑦ Sponge spacer (H = 4): 2</p> <p>4 mm</p>	<p>⑧ Screw (M6 × 75): 2</p> <p>75 mm</p>	<p>⑨ Pipe spacer (L = 45): 2</p> <p>45 mm</p>
<p>⑩ Sponge spacer (H = 12): 2</p> <p>12 mm</p>	<p>⑪ Template (for rear lower fixing point B): 1</p>		


## ■ PRECAUTIONS

- Be sure to apply the parking brake securely. Remove the ignition key from the key cylinder.
- Be sure to wear protective goggles when drilling.
- Be sure to clean away the drilling chips after drilling each hole as they may scratch the interior surface. Do not use an air gun. Use a vacuum cleaner.

# INSTALLATION PROCEDURES

## A. APPLICATION OF THE FIXING POINTS

This product cannot be installed on vehicles with factory-fitted cargo blind (rear shelf).

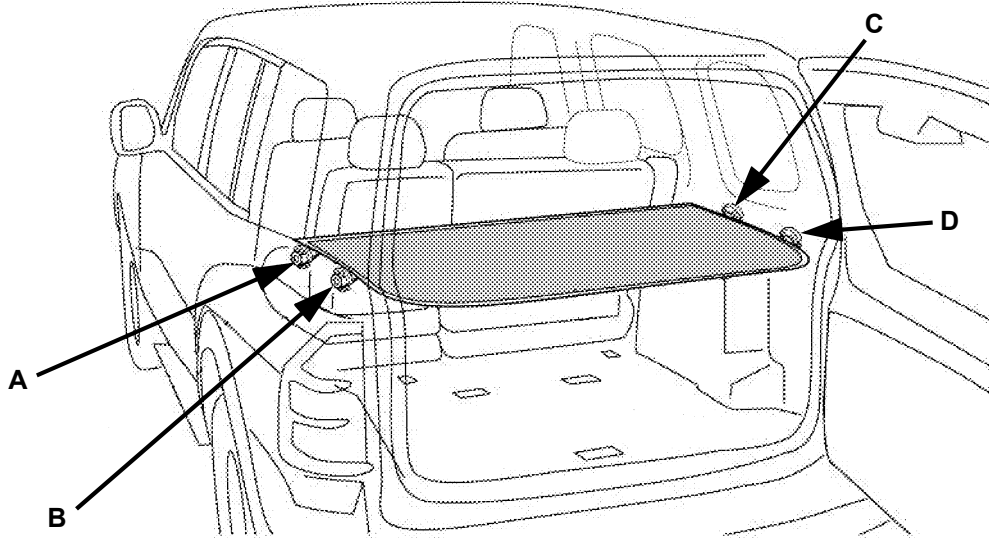

Body type		Long body		Remarks
Factory option	Cargo blind (Rear shelf)	–	o	o: Equipped –: Not equipped
Fixing point	<b>A, C:</b> Quarter trim lower (front, left and right)	o	–	o: Available –: Not available
	<b>B, D:</b> Quarter trim lower (rear, left and right)			




Required components & their quantities	② Hook	4	–	For points <b>A, B, C</b> and <b>D</b>
	③ Washer	4		
	④ Inner sleeve	4		
	⑤ Screw (M6 × 65)	2	–	For points <b>A</b> and <b>C</b>
	⑥ Pipe spacer (L = 38)	2		
	⑦ Sponge spacer (H = 4)	2		
	⑧ Screw (M6 × 75)	2	–	For points <b>B</b> and <b>D</b>
	⑨ Pipe spacer (L = 45)	2		
	⑩ Sponge spacer (H = 12)	2		

Check


## B. MARKING THE INSTALLATION POINTS

- 1) Cut out the template ⑪ properly.
- 2) Place the template ⑪ over the quarter upper trim as shown in the drawing and mark the point B with a gimlet.
- 3) Mark the points A, C and D using a tape measure and a gimlet.

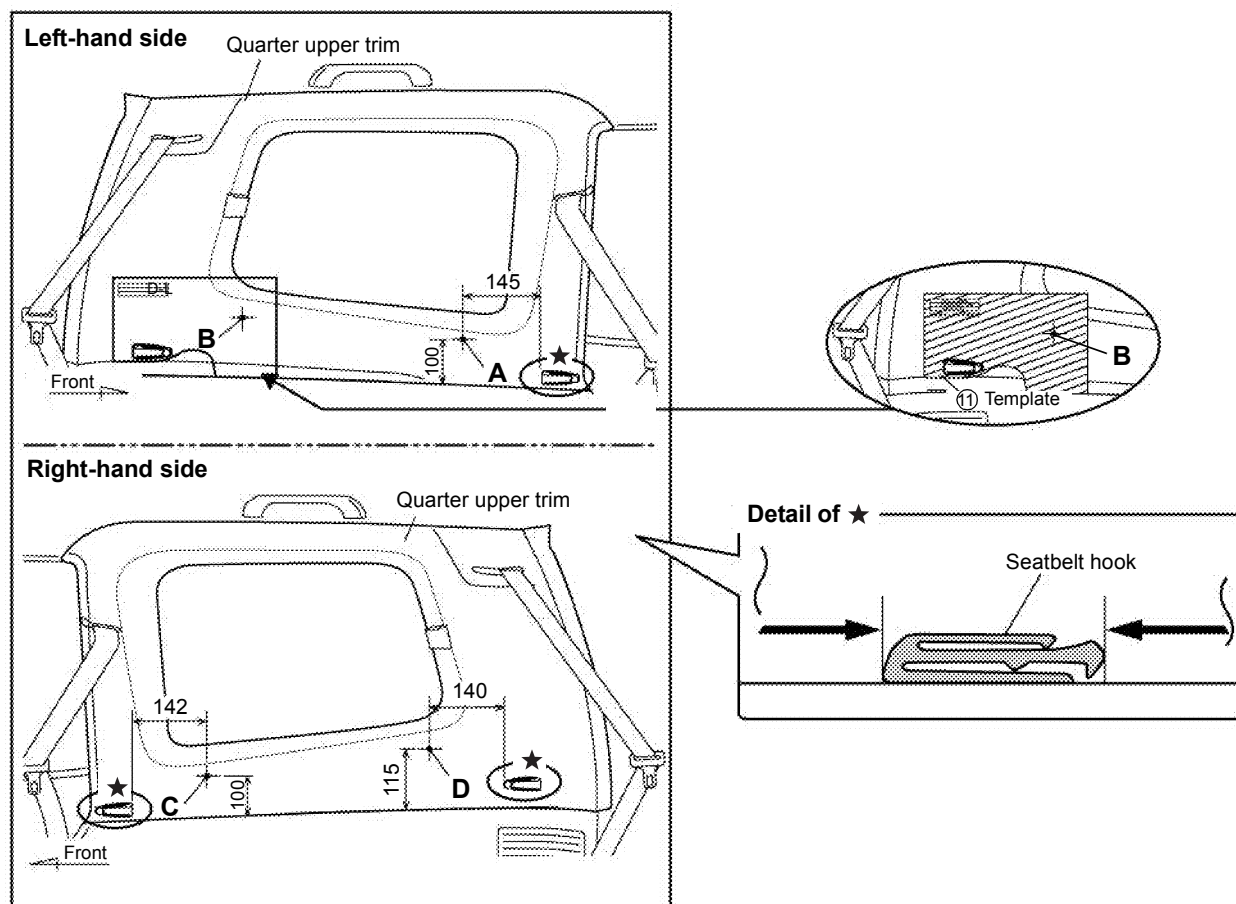

Check	
-------	--


## C. DRILLING THE MOUNTING HOLES

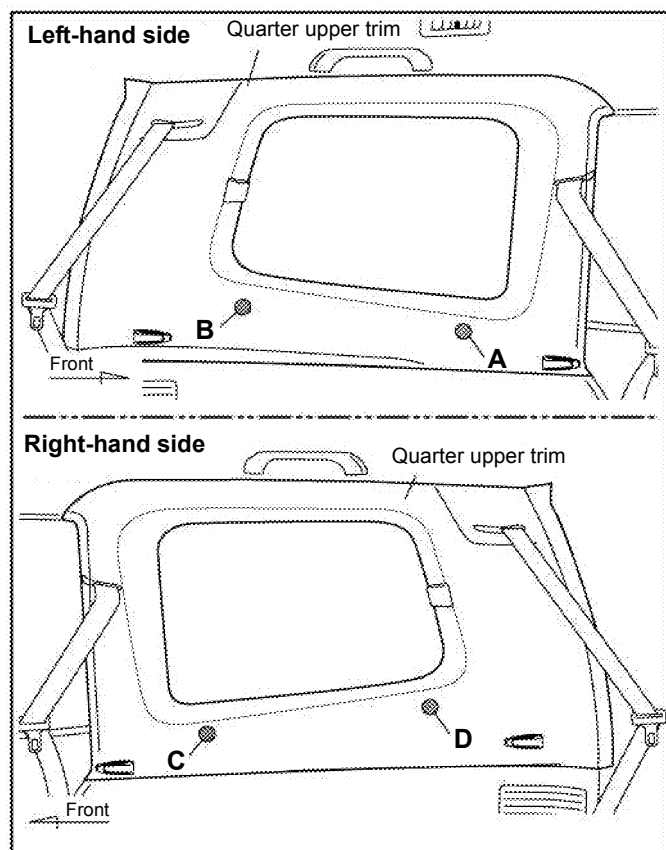

- 1) Drill the  $\phi$  15-mm holes to the points A, B, C and D using a hole saw.

### Note


To prevent damage to the inside parts, be sure to use a hole saw which is shorter than 30 mm.

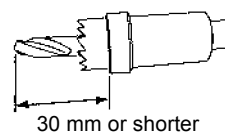


Check	
-------	--

## D. INSTALLING THE UTILITY HOOKS

L.H.

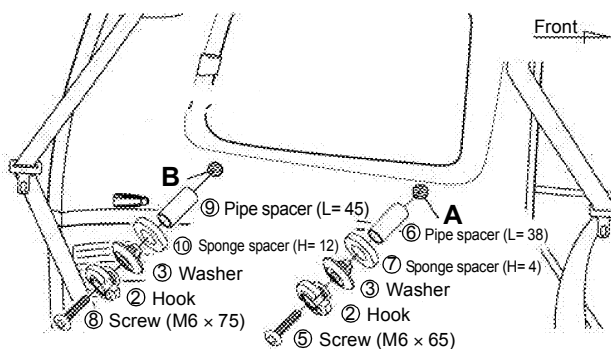


R.H.

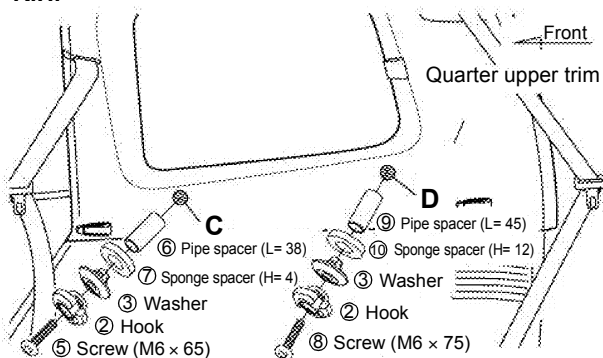


- 1) Install the parts shown in the drawing to the weld nuts in the holes A, B, C and D.

### ⚠ Caution

- After tightening the screw, check that the washer ③ is fixed firmly in place, and that only the hook ② can be turned. The hook ② will not turn if the screw has been fastened too tightly.

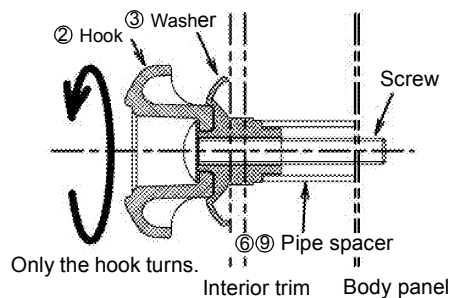

- Fit the entire sponge spacer ⑦ or ⑩ inside the rim of the washer ③.

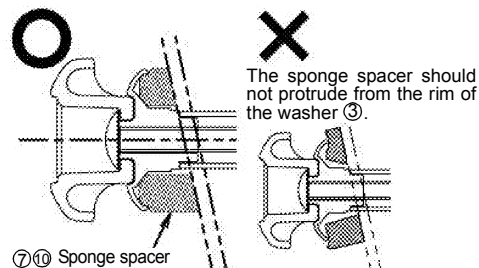


### ⚠ Caution

Be careful not to let the parts fall behind the lining.


Check

## E. INSTALLING THE INNER SLEEVE

L.H.

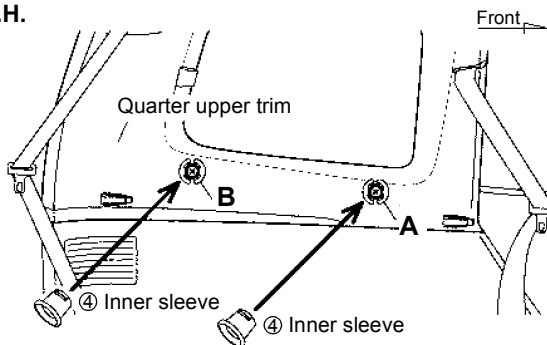

R.H.

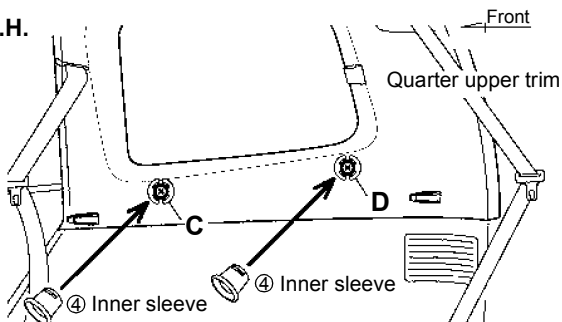


- 1) Insert the inner sleeve ④ to each hook ②. (4 places)

### **Caution**


- Fit both lugs on the inner sleeve ④ securely into the square holes in the hook ②.

Lug (2 places)

Square hole (2 places)

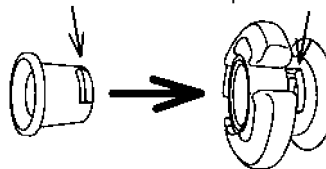

- Press the lug portion from inside using a flat-blade screwdriver to engage the lugs securely.

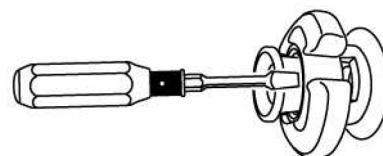


### **Note**

This process can be facilitated by heating the inner sleeve ④ to approx. 30°C. (Do not use a lubricant, as this will cause the sleeve to slip out after installation.)

Check	
-------	--


## F. INSTALLING THE CARGO ROOM COVER

- 1) Hook four loops at the end of the belts of the cargo room cover ① to the utility hooks. Then tighten the belts evenly.

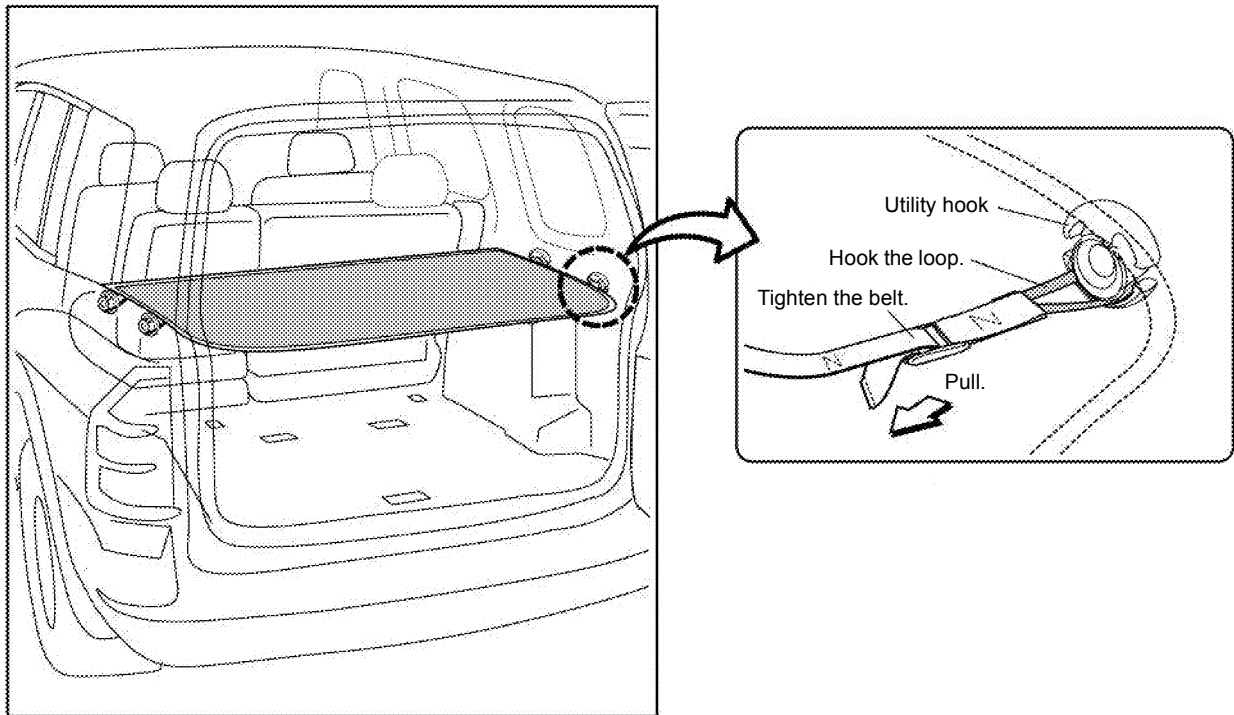

### **Caution**

Do not hook the loop to only one arm (marked \*) of the utility hook. The hook will be turned and the loop will be slip off.

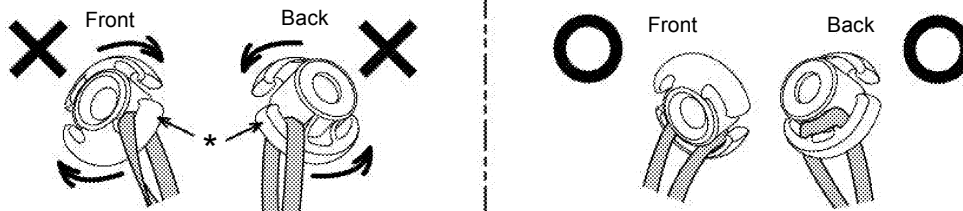

- 2) To remove the product, loosen the belts sufficiently and take off the loops from the utility hooks.

Check	
-------	--

## CARE AND HANDLING

### **Caution**

- Do not put anything on this product. Doing so may deform or damage the product.
- Do not remove or install the product while driving.

- This product may discolor quickly in some conditions.
- This product cannot be dry-cleaned. If the product becomes dirty, wipe softly with a soft cloth moistened with neutral detergent solution.