


OUTLANDER SPORT FRONT UNDER COVER (CHROME) MZ575946EX INSTALLATION AND HANDLING INSTRUCTIONS

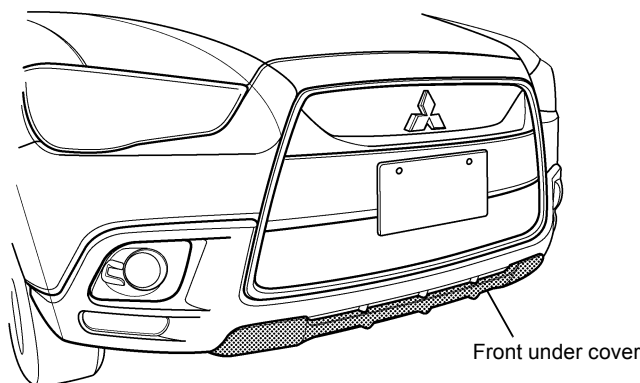

Thank you for purchasing the Mitsubishi Genuine Accessory.
To install and use the product correctly with proper knowledge of it, read this publication carefully.
Keep this publication for reference when maintenance is required.

Attention

- This publication gives precautionary instructions in the boxes titled as follows.
Read through these instructions thoroughly.



Caution

Describes precautions that should be observed in order to prevent injury or damage to the vehicle or its components, which may occur if sufficient care is not taken.




Note

Provides additional information that facilitates installation work.






- Failure to follow these instructions not only prevents the product from working properly but may lead to trouble with the vehicle. Be sure to follow all instructions carefully.
- If there is anything unclear about the installation, handling and/or usage of the product, contact your Mitsubishi Motors dealer for clarification.
- Mitsubishi Motors Corporation is not responsible for any defects or difficulties caused by or resulting from the failure to follow given instructions.
- We recommend you to have the installation performed at an authorized Mitsubishi Motors dealer.

To the dealer:
Be sure that the customer receives this publication.

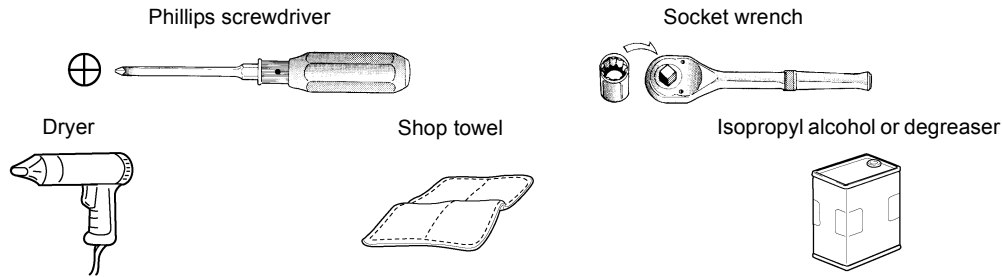■ TOOLS (Make the following tools ready for use.)



■ COMPONENTS (Make sure that all of the following components were included in the kit.)


| | | |
|---|--|---|
| ① Front under cover: 1  | ② Speed nut: 3  | ③ Tapping screw (M5 × 20): 3  |
| ④ Clip: 4  | ⑤ Installation and Handling Instructions (this document): 1  | |

■ PRECAUTIONS

- Be sure to apply the parking brake securely. Remove the ignition key from the key cylinder.

INSTALLATION PROCEDURES


A. PRE-OPERATIONAL WORK

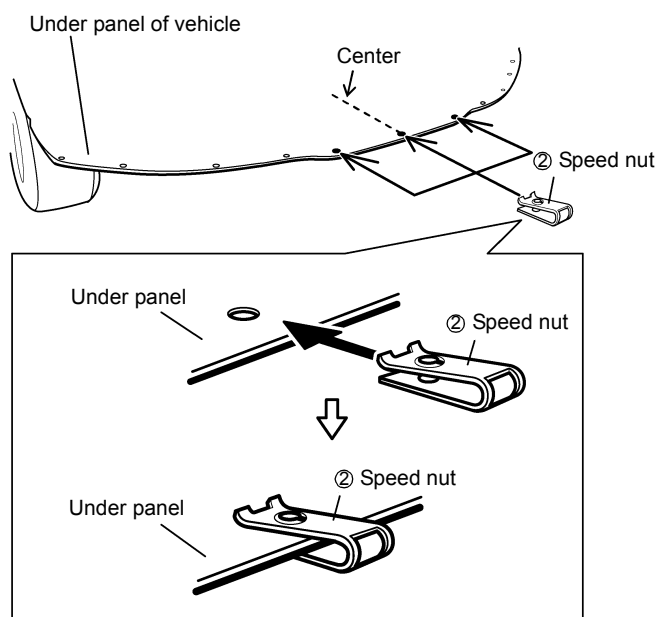

- 1) Remove the front bumper in accordance with the workshop manual.
- 2) Fit the three speed nuts ② to the three clip mounting holes at the center of the under panel as shown in the drawing. Be sure to align the holes on the speed nuts with those on the under panel.

Note




These holes cannot be aligned if the speed nut ② is fully inserted.

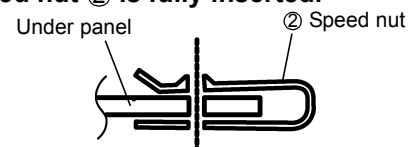

- 3) Reinstall the front bumper while taking care not to move the aligned speed nuts ②. When reinstalling, however, do not attach the seven clips at the positions shown in the drawing in B-6).

Check

B. INSTALLING THE FRONT UNDER COVER

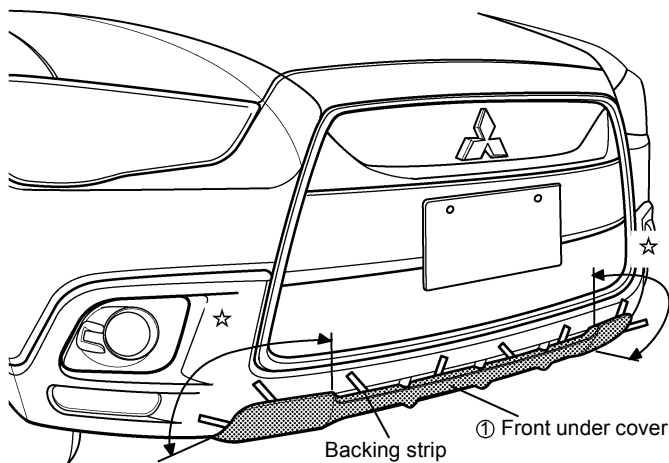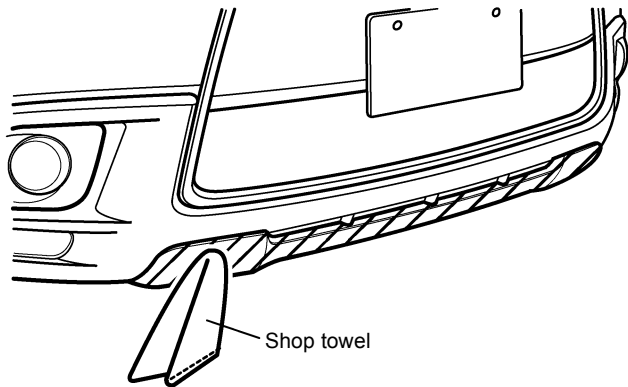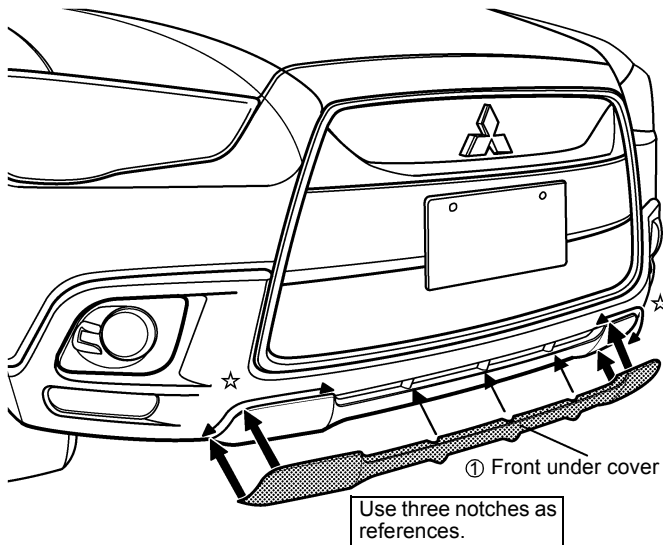

- 1) Place the front under cover ① on the front bumper to confirm its mounting position. Using the three notches at the top of the front under cover ① as references, position the under cover ① so that the left and right gaps at the positions marked with ☆ in the drawing become equal.

- 2) Clean and degrease the under cover ① mounting position on the front bumper using clean shop towel moistened with isopropyl alcohol or degreaser.

⚠ Caution


- When using isopropyl alcohol or degreaser, work in a well-ventilated space. Keep away from flames.
- Never use organic solvent such as thinner, benzine, gasoline, etc.

- 3) Peel off the backing strips of the adhesive tape at the back of the front under cover ①. Peel off each backing strip partway and fold it outward.

⚠ Caution

- Be sure not to touch the adhesive surface of the adhesive tape by a dirty hand or glove, or remove and reapply the adhesive tape. Doing so makes the tape lose much of its adhesion.
- Low ambient temperature (below 15°C) greatly reduces the adhesive strength of adhesive tape, which can cause peeling off. Work in a warm place or warm the adhesive tape using a dryer.

- 4) Position the front under cover ① as confirmed in B-1). Adjust so that the left and right gaps at the positions marked with ☆ in the drawing become equal and lightly fix the under cover ①.

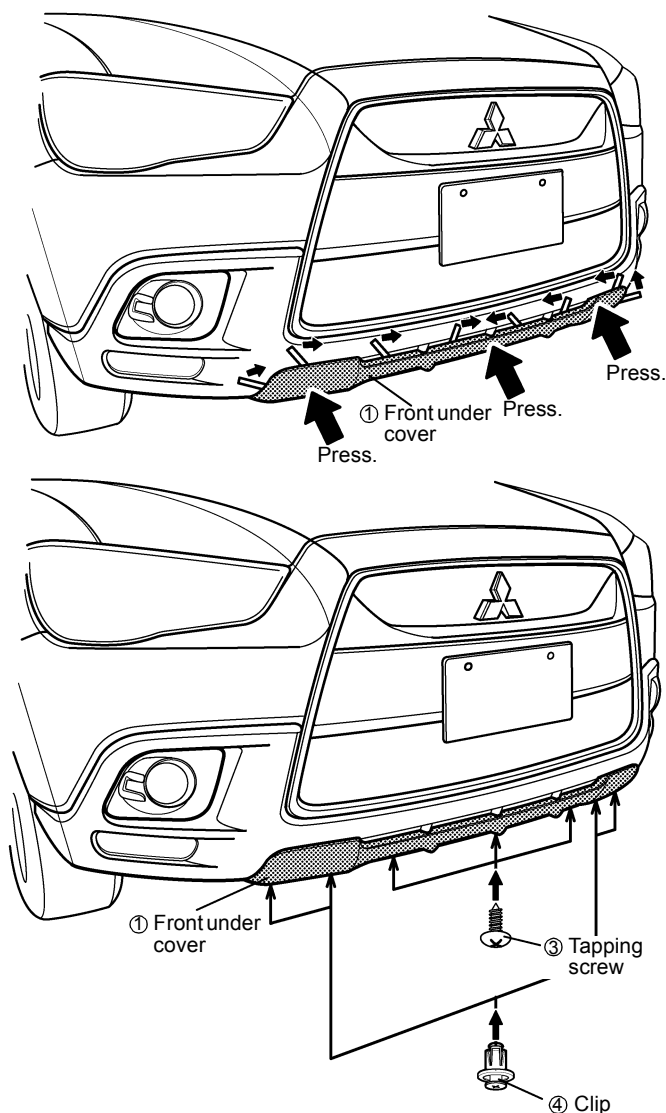

5) Peel off the remaining backing strips slowly and carefully and then press the under cover ① against the bumper firmly.

6) Fasten the front under cover ① with tapping screws ③ and clips ④ as shown in the drawing.

- Use three tapping screws ③ at the center three mounting holes.
- Use four clips ④ at the left and right (two each) mounting holes.

| | |
|-------|--|
| Check | |
|-------|--|

C. CHECKING AFTER INSTALLATION

1) Check that the product is attached firmly and the fasteners are fitted securely.



Caution

Do not wash the vehicle for 24 hours after attaching the product, otherwise it may peel off. Keep the vehicle out of the rain and other water during this period.

| | |
|-------|--|
| Check | |
|-------|--|

CARE AND HANDLING

- To clean the product, wipe with soft cloth moistened with mild detergent.
- Take care to prevent contact with gasoline, kerosene, brake fluid, engine oil, grease, paint thinner, sulfuric acid (battery electrolyte) and wax remover that could cause discoloration, staining and cracking. Should any of them contact the surface, remove it immediately by wiping with a mild detergent-moistened soft cloth or chamois leather, then wash the surface completely with water.