


LANCER / OUTLANDER / ASX / OUTLANDER SPORT DOOR HANDLE COVER (CHROME) INSTALLATION AND HANDLING INSTRUCTIONS

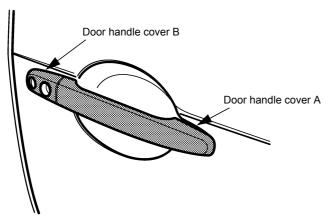

MZ576227EX	Vehicles with keyless operation system
MZ576228EX	Vehicles with keyless entry system

This shows the driver's door with keyless operation system.

Thank you for purchasing the Mitsubishi Genuine Accessory.

To install and use the product correctly with proper knowledge of it, read this publication carefully. Keep this publication for reference when maintenance is required.

Attention

This publication gives precautionary instructions in the boxes titled as follows.
 Read through these instructions thoroughly.



Describes precautions that should be observed in order to prevent injury or damage to the vehicle or its components, which may occur if sufficient care is not taken.



Provides additional information that facilitates installation work.

- Failure to follow these instructions not only prevents the product from working properly but may lead to trouble with the vehicle. Be sure to follow all instructions carefully.
- If there is anything unclear about the installation, handling and/or usage of the product, contact your Mitsubishi Motors dealer for clarification.
- Mitsubishi Motors Corporation is not responsible for any defects or difficulties caused by or resulting from the failure to follow given instructions.
- We recommend you to have the installation performed at an authorized Mitsubishi Motors dealer.

To the dealer:


Be sure that the customer receives this publication.




(10B1010)

Neutral detergent Shop towel Primer (Applicable for adhering polycarbonate + polyethylene terephthalate (PC + PET)

■ **COMPONENTS** (Make sure that all of the following components were included in the kit.)

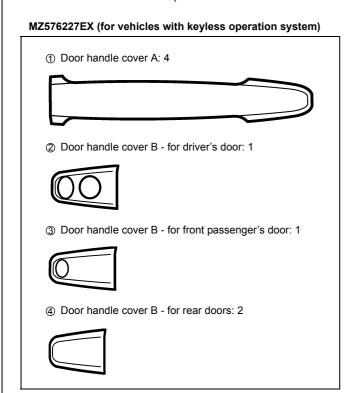

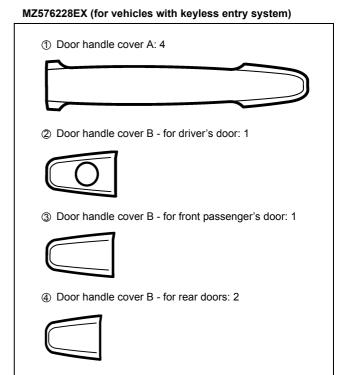


and acrylic foam pad)

■ PRECAUTIONS

- Be sure to apply the parking brake securely. Remove the ignition key from the key cylinder.
- Be sure to wipe off dust and oil from the surfaces where adhesive tape is to be attached using a clean shop towel moistened with neutral detergent. Then dry the surfaces well. Never use organic solvent such as thinner, benzine, gasoline, etc.
- Adhesive tape loses much of its adhesion if the adhesive surface is touched by a dirty hand or glove, or if the tape is removed after application.
- Low ambient temperature (below 15°C) greatly reduces the adhesion of adhesive tape and can cause it to peel off. Work in a warm place or warm the surface where the tape is to be applied as necessary.
- The drawings in the Installation Procedures depict the installation on the driver's door handle. Install on the other door handles in the same manner.

INSTALLATION PROCEDURES

A. PREPARATORY WORK

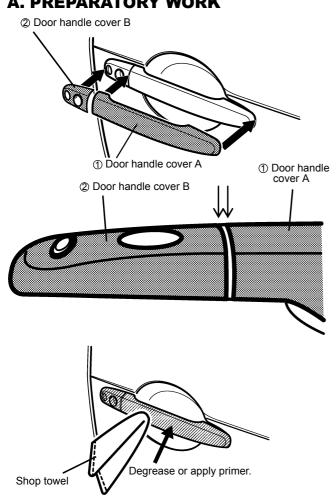

1) Place the door handle cover A ① and door handle cover B ② on the installation position without peeling off the backing strip of the adhesive tape to confirm their installation positions. Check that the covers do not hinder the operations of the door handle, lock switch, and key.




Never install the door handle covers with their edges extended from the door handle at the arrow positions.

- 2) On color-keyed door handle models, wipe clean any dirt and oil from the door handle cover mounting position (hatched area) using a shop towel moistened with neutral detergent.
 - · On material-black door handle models, wipe clean and apply primer to the cover mounting portion (hatched portion).

Check

B. INSTALLING THE DOOR HANDLE COVERS

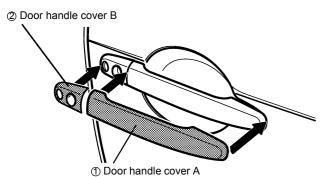

- 1) Peel off all the backing strips of the adhesive tape and carefully attach the door handle cover A (1) and door handle cover B 2 at the positions confirmed in step A-1).
- 2) Perform the same procedure on the other door handles.

Check

 Check that the product is attached securely in the correct position. Check that the covers do not hinder the operations of the door handle, lock switch, and key. 		
<u> </u>		
To ensure firm installation, do not touch the product for 24 hours after attaching it.		
	Check	
CARE AND HANDLING		
 To clean the product, wipe with a soft cloth moistened with neutral detergent. Never use such as thinner or benzene. 	an organic solvent	
	_	

C. CHECKING AFTER INSTALLATION