


# AIR FILTER (for Air-conditioner) MZ341012EX INSTALLATION AND HANDLING INSTRUCTIONS

| Applicable Models   |
|---|
| GRANDIS / AIRTREK / OUTLANDER / LANCER / TRITON / L200 /<br>L200 SPORTERO / PAJERO SPORT / MONTERO SPORT / NATIVA |

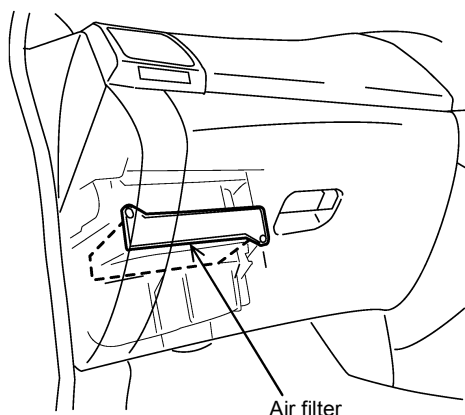

Thank you for purchasing the Mitsubishi Genuine Accessory.  
To install and use the product correctly with proper knowledge of it, read this publication carefully.  
Keep this manual for reference when maintenance is required.

## Attention

- This manual gives precautionary instructions in the boxes titled as follows.  
Read through these instructions thoroughly.



### Caution

Describes precautions that should be observed in order to prevent injury or damage to the vehicle or its components, which may occur if sufficient care is not taken.



### Note


Provides additional information that facilitates installation work.

- Failure to follow these instructions not only prevents the product from working properly but may lead to trouble with the vehicle. Be sure to follow all instructions carefully.
- If there is anything unclear about the installation, handling and/or usage of the product, contact an authorized Mitsubishi Motors dealer for clarification.
- Mitsubishi Motors Corporation is not responsible for any defects or difficulties caused by or resulting from the failure to follow given instructions.
- We recommend you to have the installation performed at an authorized Mitsubishi Motors dealer.


To the dealer:  
Be sure that the customer receives this manual.

## ■ TOOLS (Make the following tools ready for use.)


Socket wrench (10 mm)

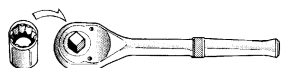


Extension bar



Phillips screwdriver




Utility knife

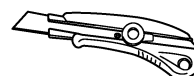


## ■ COMPONENTS (Make sure that all of the following components were included in the kit.)

① Air filter: 1

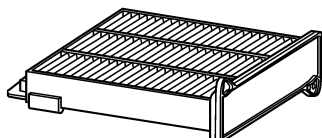


② Tapping screw (M5 × 14): 2

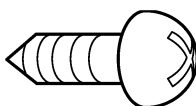

③ Inspection label: 1

| AIR FILTER REPLACEMENT SERVICE RECORD <small>(calculate miles)</small>  |            |
|---|------------|
| KEEPING BETTER FILTERING PERFORMANCE, MITSUBISHI MOTORS CORPORATION HIGHLY RECOMMENDS REPLACING GENUINE AIR PURIFIER FILTER EVERY ONE YEAR OR 15,000KM (9,000MILES), WHICHEVER COMES FIRST. |            |
| Replacement Part Number:  |            |
| DATE OF INSTALLATION  | MILEAGE    |
| -   | KM / MILES |
| -   | KM / MILES |
| -   | KM / MILES |
| -   | KM / MILES |

④ Installation and Handling Instructions (this document): 1

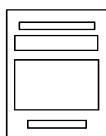


## ■ PRECAUTIONS

- Be sure to apply the parking brake securely. Remove the ignition key from the key cylinder.
- To keep out dirt and dust, unpack this product just before installation.

# INSTALLATION PROCEDURES FOR GRANDIS

## A. PRE-OPERATIONAL WORK

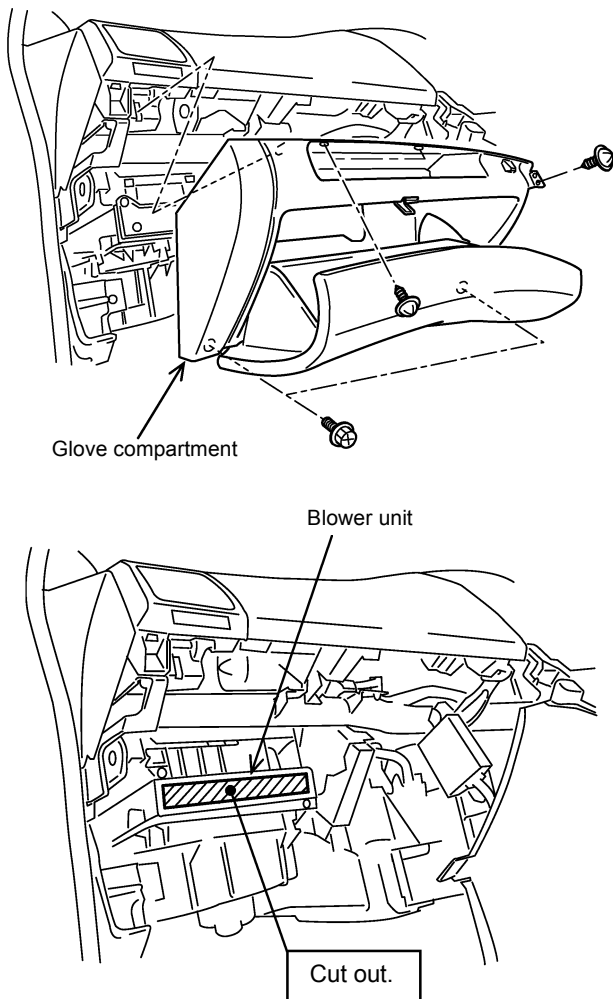


- 1) Confirm that this is the first time to install or replace the air filter. Open the glove compartment (over its stopper, if necessary) and check whether an air filter is already installed at the hatched section in the lower drawing) with two tapping screws.

If this is a replacement work, remove and discard the old air filter and go to step B.

- 2) If this is the first installation, remove the glove compartment in accordance with the workshop manual. During removal, be sure to disconnect the connector connected to the glove compartment and remove the light bulb for illumination.
- 3) Cut out the hatched section of the blower unit carefully along the groove on the unit.
- 4) After cutting, clean the inside of the blower unit and remove any cutting chips.

|       |  |
|-------|--|
| Check |  |
|-------|--|

## B. INSTALLING THE AIR FILTER

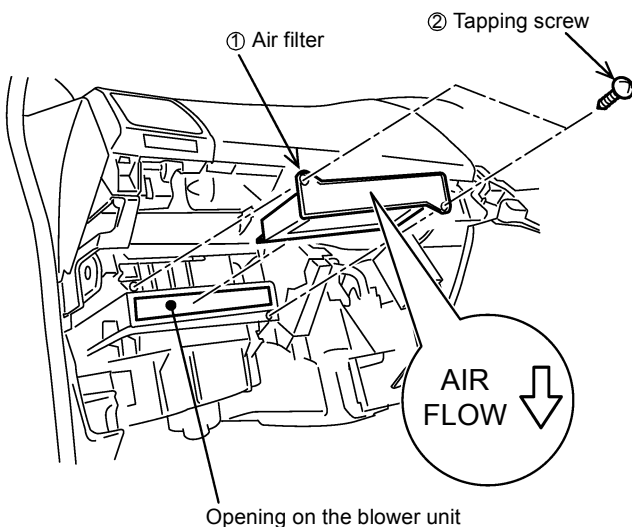

- 1) Install the air filter ① in the correct direction. The "AIR FLOW" arrow mark on the air filter should be pointing downward.




### Caution

If the filter is installed upside down, it will not function properly.

- 2) Insert the air filter ① fully and fix it securely with two tapping screws ②.

|       |  |
|-------|--|
| Check |  |
|-------|--|

## C. FILLING IN THE INSPECTION LABEL

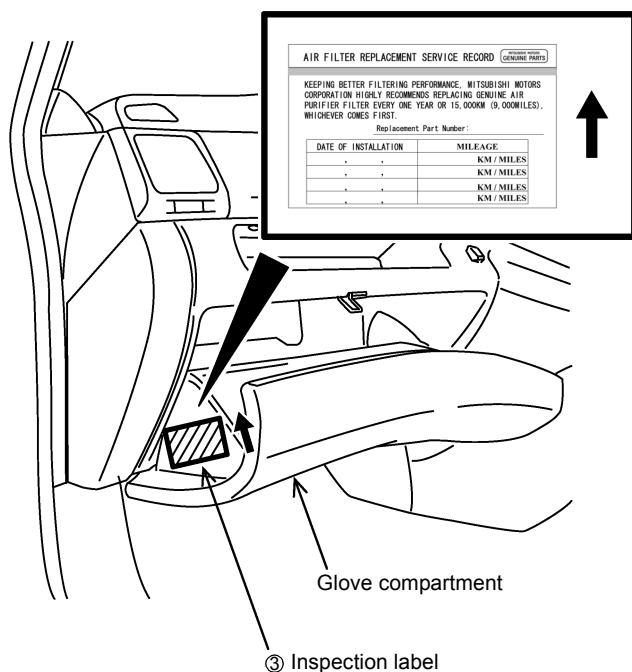

- 1) Reinstall the glove compartment as necessary. Reconnect the removed connector and reinstall the light bulb.
- 2) Open the glove compartment and fill in the date of replacement, driving distance, and the replacement part number (shown below) on the inspection label. If there is no label, wipe clean the left side of the glove compartment and attach the inspection label ③ at the position shown in the drawing.
  - Replacement part number: MR398288

Check


## D. CHECKING AFTER INSTALLATION

- 1) Check that the air filter and the removed parts are installed securely.

Check

# INSTALLATION PROCEDURES FOR AIRTREK / OUTLANDER / LANCER

## A. PRE-OPERATIONAL WORK

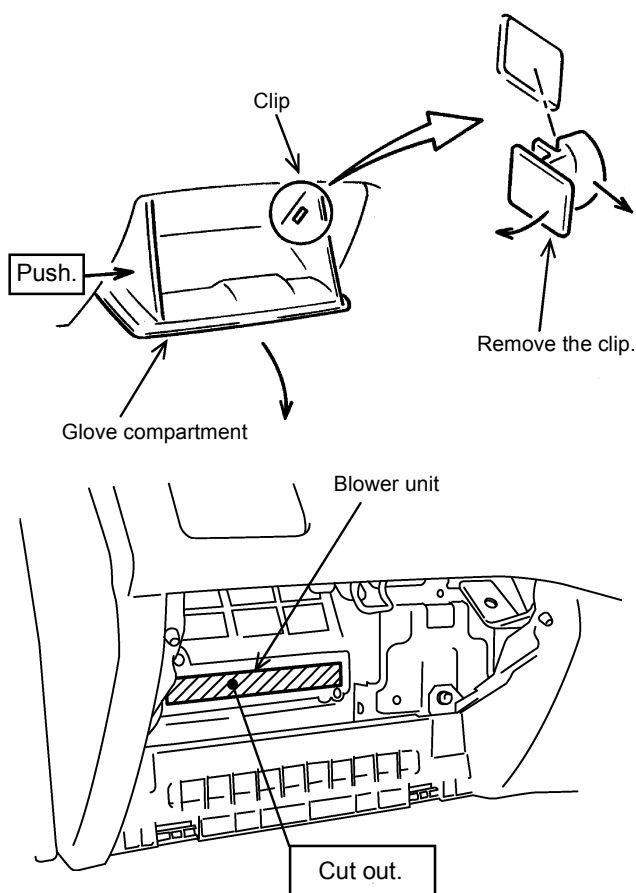

1) Remove the glove compartment in accordance with the workshop manual.

2) Confirm that this is the first time to install or replace the air filter. Check whether an air filter is already installed at the hatched section shown in the drawing (with two tapping screws).


If this is a replacement work, remove and discard the existing air filter and go to step B.

3) If this is the first installation, cut out the hatched section of the blower unit carefully along the groove on the unit.

4) After cutting, clean the inside of the blower unit and remove any cutting chips.

Check

## B. INSTALLING THE AIR FILTER

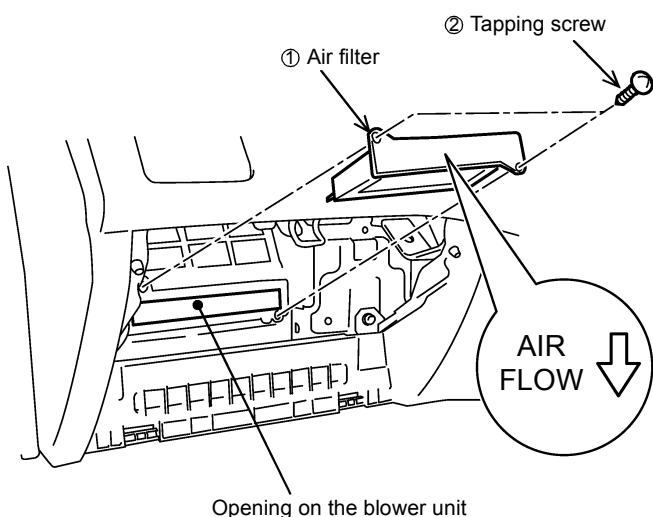

1) Install the air filter ① in the correct direction. The "AIR FLOW" arrow mark on the air filter should be pointing downward.



### Caution


If the filter is installed upside down, it will not function properly.

2) Insert the air filter ① fully and fix it securely with two tapping screws ②.


Check

## C. FILLING IN THE INSPECTION LABEL

For AIRTREK / OUTLANDER

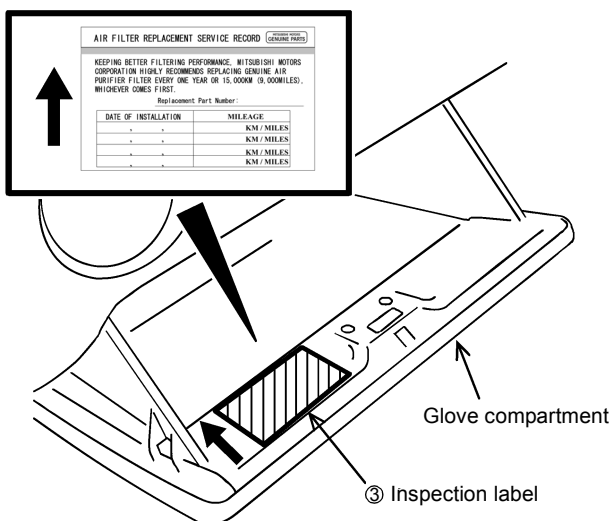

For LANCER

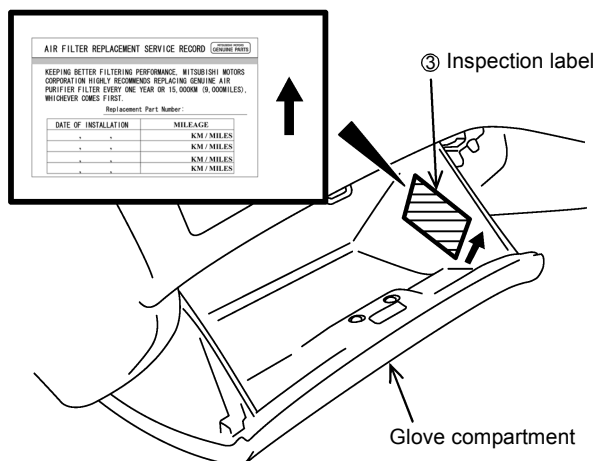

- 1) Reinstall the glove compartment.
- 2) Open the glove compartment and fill in the date of replacement, driving distance, and the replacement part number (shown below) on the inspection label. If there is no label, wipe clean the label attaching position on the glove compartment shown in the drawing and attach the inspection label ③.
  - Replacement part number: MR398288

Check

## D. CHECKING AFTER INSTALLATION

- 1) Check that the air filter and the removed parts are installed securely.

Check

# INSTALLATION PROCEDURES FOR TRITON / L200 / L200 SPORTERO / PAJERO SPORT / MONTERO SPORT / NATIVA

## A. PRE-OPERATIONAL WORK

Air bag harness connector

Release the clip from the cover but do not disconnect the connectors.

Glove compartment cover

Glove compartment

Blower unit

Cut out.

- 1) Remove the glove compartment and the glove compartment cover in accordance with the workshop manual. Be sure to release the air bag harness connector from the glove compartment cover.



### Caution

- Be careful not to damage the air bag harness.
- Release the clip securing the connectors to the glove compartment cover from the cover, but do not disconnect the air bag harness connectors.


- 2) Confirm that this is the first time to install or replace the air filter. Check whether an air filter is already installed at the hatched section shown in the drawing (with two tapping screws).

If this is a replacement work, remove and discard the existing air filter and go to step B.

- 3) If this is the first installation, cut out the hatched section of the blower unit carefully along the groove on the unit.
- 4) After cutting, clean the inside of the blower unit and remove any cutting chips.

|       |  |
|-------|--|
| Check |  |
|-------|--|

## B. INSTALLING THE AIR FILTER

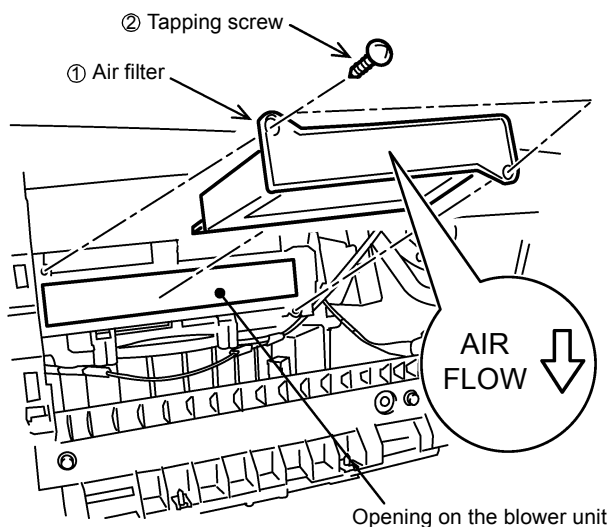

- 1) Install the air filter ① in the correct direction. The “AIR FLOW” arrow mark on the air filter should be pointing downward.




### Caution

If the filter is installed upside down, it will not function properly.

- 2) Insert the air filter ① fully and fix it securely with two tapping screws ②.

Check

## C. FILLING IN THE INSPECTION LABEL

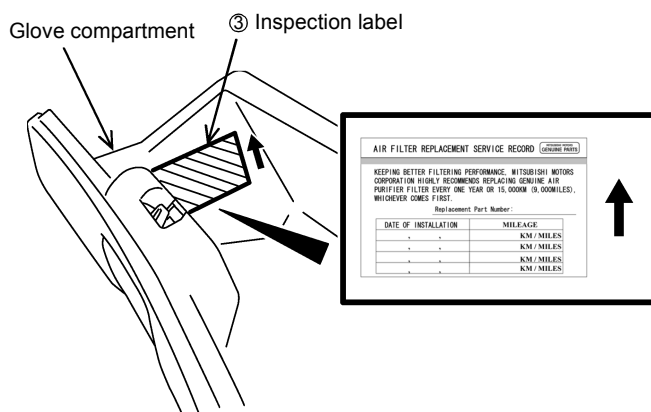

- 1) Reinstall the glove compartment and the glove compartment cover. Be sure to secure the air bag harness connector on the glove compartment cover.



### Caution

Confirm that the air bag harness connectors are connected securely.

- 2) Open the glove compartment and fill in the date of replacement, driving distance, and the replacement part number (shown below) on the inspection label. If there is no label, wipe clean the label attaching position on the glove compartment shown in the drawing and attach the inspection label ③.
  - Replacement part number: MR398288

Check

## D. CHECKING AFTER INSTALLATION

- 1) Check that the air filter and the removed parts are installed securely.

Check



## **CARE AND HANDLING**

### **DESCRIPTION**

- This air filter is built into the air conditioning system to eliminate pollen, mites, exhaust gas, volatile organic compounds (VOC), and allergens from the cabin air.
- This product removes dust in the air entering the cabin or recirculating in the cabin to keep the interior environment clean.

### **HANDLING PRECAUTIONS**

- To keep out dirt and dust, unpack this product just before installation.
- Do not store this product in direct sunlight, or in hot and humid environments.
- This product is disposable, and cannot be cleaned and reused. If it becomes dirty, replace it with the specified Mitsubishi Genuine air filter (Part No.: MR398288).
- This product should be replaced every year or after 15,000 km of driving in whichever comes first. More frequent replacement may be necessary depending on the usage environment. (For the maintenance interval, refer to the SERVICE BOOKLET.)
- The airflow resistance of the air filter increases as it collects dust. If it is used for an extended period of time, the performance of the air conditioner will lower. Be sure to replace it periodically.
- If you have any question about maintaining this product, ask an authorized Mitsubishi Motors dealer.