



**Power Amplifier 11 ch (->2012)**  
**CV-0MW7B51 (8701A114)**  
**CV-0MW7B51-2 (8701A222)**

Sch - Mitsubishi Pajero IV 2012

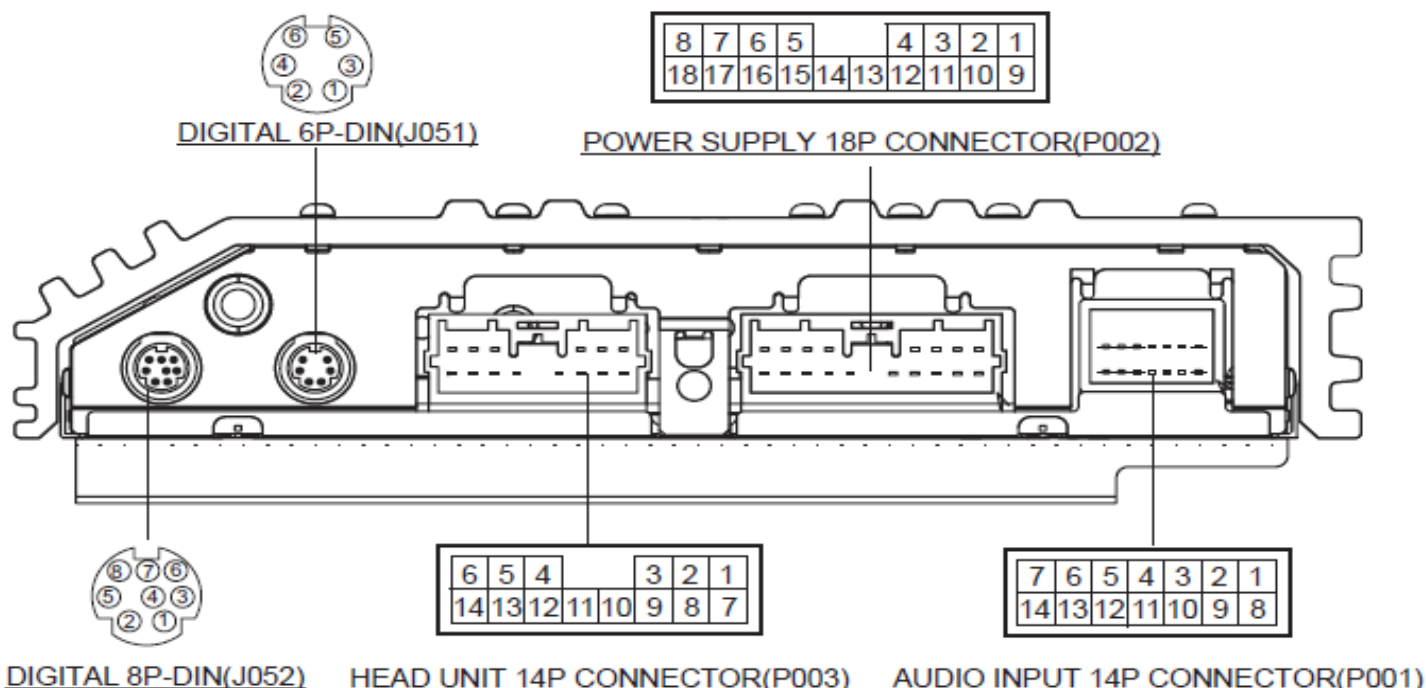


**Power supply and Speakers 18P Connector**




Pin	E-37	Signal	Pin	E-37	Signal
1	28	Speaker Front Left (+)	9	38	Speaker Front Left (-)
2	27	Speaker Front Right (+)	10	37	Speaker Front Right (-)
3	26	-	11	36	Battery (+)
4	25	Battery (+)	12	35	Battery (+)
			13	34	Data
			14	33	Shield GND Data
5	24	GND	15	32	GND
6	23	-	16	31	GND
7	22	Subwoofer 1 (+)	17	30	Subwoofer 1 (-)
8	21	Subwoofer 2 (+)	18	29	Subwoofer 2 (-)

**Speakers and Audio Input 14P Connector**



Pin	E-38	Signal	Pin	E-38	Signal
1	6	Tweeter Front Left (+)	7	14	Tweeter Front Left (-)
2	5	Front Tweeter Right (+)	8	13	Front Tweeter Right (-)
3	4	Front Left In (+)	9	12	Front Left In (-)
			10	11	Front Right In (-)
			11	10	Front Right In (+)
4	3	Power On	12	9	Shield GND In
5	2	Speaker Rear Right (+)	13	8	Speaker Rear Right (-)
6	1	Speaker Rear Left (+)	14	7	Speaker Rear Left (-)

**Audio Input and Extended Speakers 14P Connector**



Pin	E-36	Signal	Pin	E-36	Signal
1	47	-	8	54	-
2	46	-	9	53	-
3	45	-	10	52	-
4	44	Speaker Reargate Left (+)	11	51	Speaker Reargate Left (-)
5	43	Speaker Reargate Right (+)	12	50	Speaker Reargate Right (-)
6	42	Speaker Center (+)	13	49	Speaker Center (-)
7	41	-	14	48	-

**Digital 6P-DIN (to RSES)**



Pin	Signal
1	Digital Data (-)
2	Digital Data (+)
3	Mute
4	Digital Data Common
5	-
6	-
Case	Shield

**Digital 8P-DIN (to MMCS)**



Pin	Signal
1	-
2	Digital Data (+)
3	Mute
4	Digital Data (-)
5	Digital Data Common
6	-
7	-
8	-
Case	Shield