



SERVICE BULLETIN

AFTERSALES SERVICE OFFICE, MITSUBISHI MOTORS CORPORATION

PURPOSE : INFORMATION	ISSUE NO. : MSB-07E54-004	DATE : 2007-07-05
SUBJECT : PASSWORD ERASING PROCEDURE FOR HANDS-FREE-ECU	<div> <div><MODEL></div> <div>(EUR)</div> <div>OUTLANDER</div> <div>(GS45X)(CW0W)</div> </div> <div> <div><M/Y></div> <div>07</div> </div>	
GROUP : CHASSIS ELECTRICAL		

1. Description:

According to the design change, the password erasing procedure for the hands-free-ECU has been established in the applicable Workshop Manual. This Service Bulletin contains the new procedure.

2. Applicable Manual:

Manual	Pub. No.	Title (Info-ID)	Attachment
2007 OUTLANDER Workshop Manual	CGXE07E1-CD (English) CGXS07E1-CD (Spanish) CGXF07E1-CD (French) CGXG07E1-CD (German)	Inspection Procedure 7: Check the hands-free-ECU power supply circuit. (M544-40-060-01400-01)	Attachment 1

3. Effective Date:

07GS45X (EUR): From the end of March 2007

4. Details:

Attachment 1

C-317 ETACS-ECU connector, and repair if necessary.


Q: Is the check result normal?

YES : Replace the hands-free-ECU. The system should communicate with the hands-free-ECU normally.

NO : Repair the wiring harness.

<Added>

ERASE THE PASSWORD

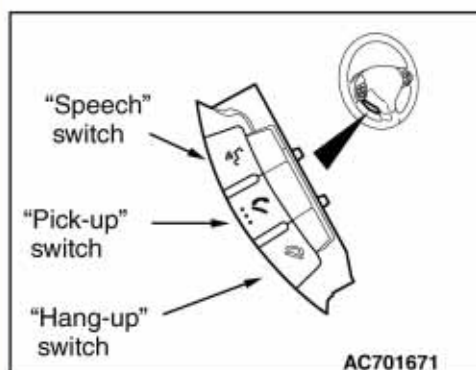

The 4-digit password set by security function can be erased by operating the hang-up switch.

1. Turn the ignition switch to the "ON" or "ACC" position, and check if the audio unit or the audio visual navigation unit is activated.
2. Check that the hands free cellular phone system is not in voice recognition mode.
3. Press and hold the hang-up switch for approximately 2 seconds (1.5 seconds or more).
4. Within approximately 10 seconds after performing step 3, press and hold the hang-up switch for approximately 2 seconds (1.5 seconds or more) twice again.

NOTE: Even if the password is erased, guidance such as voice guide is not provided.

5. After the operation, check if the lock with the password is unlocked. If the lock is not unlocked, repeat from step 2.