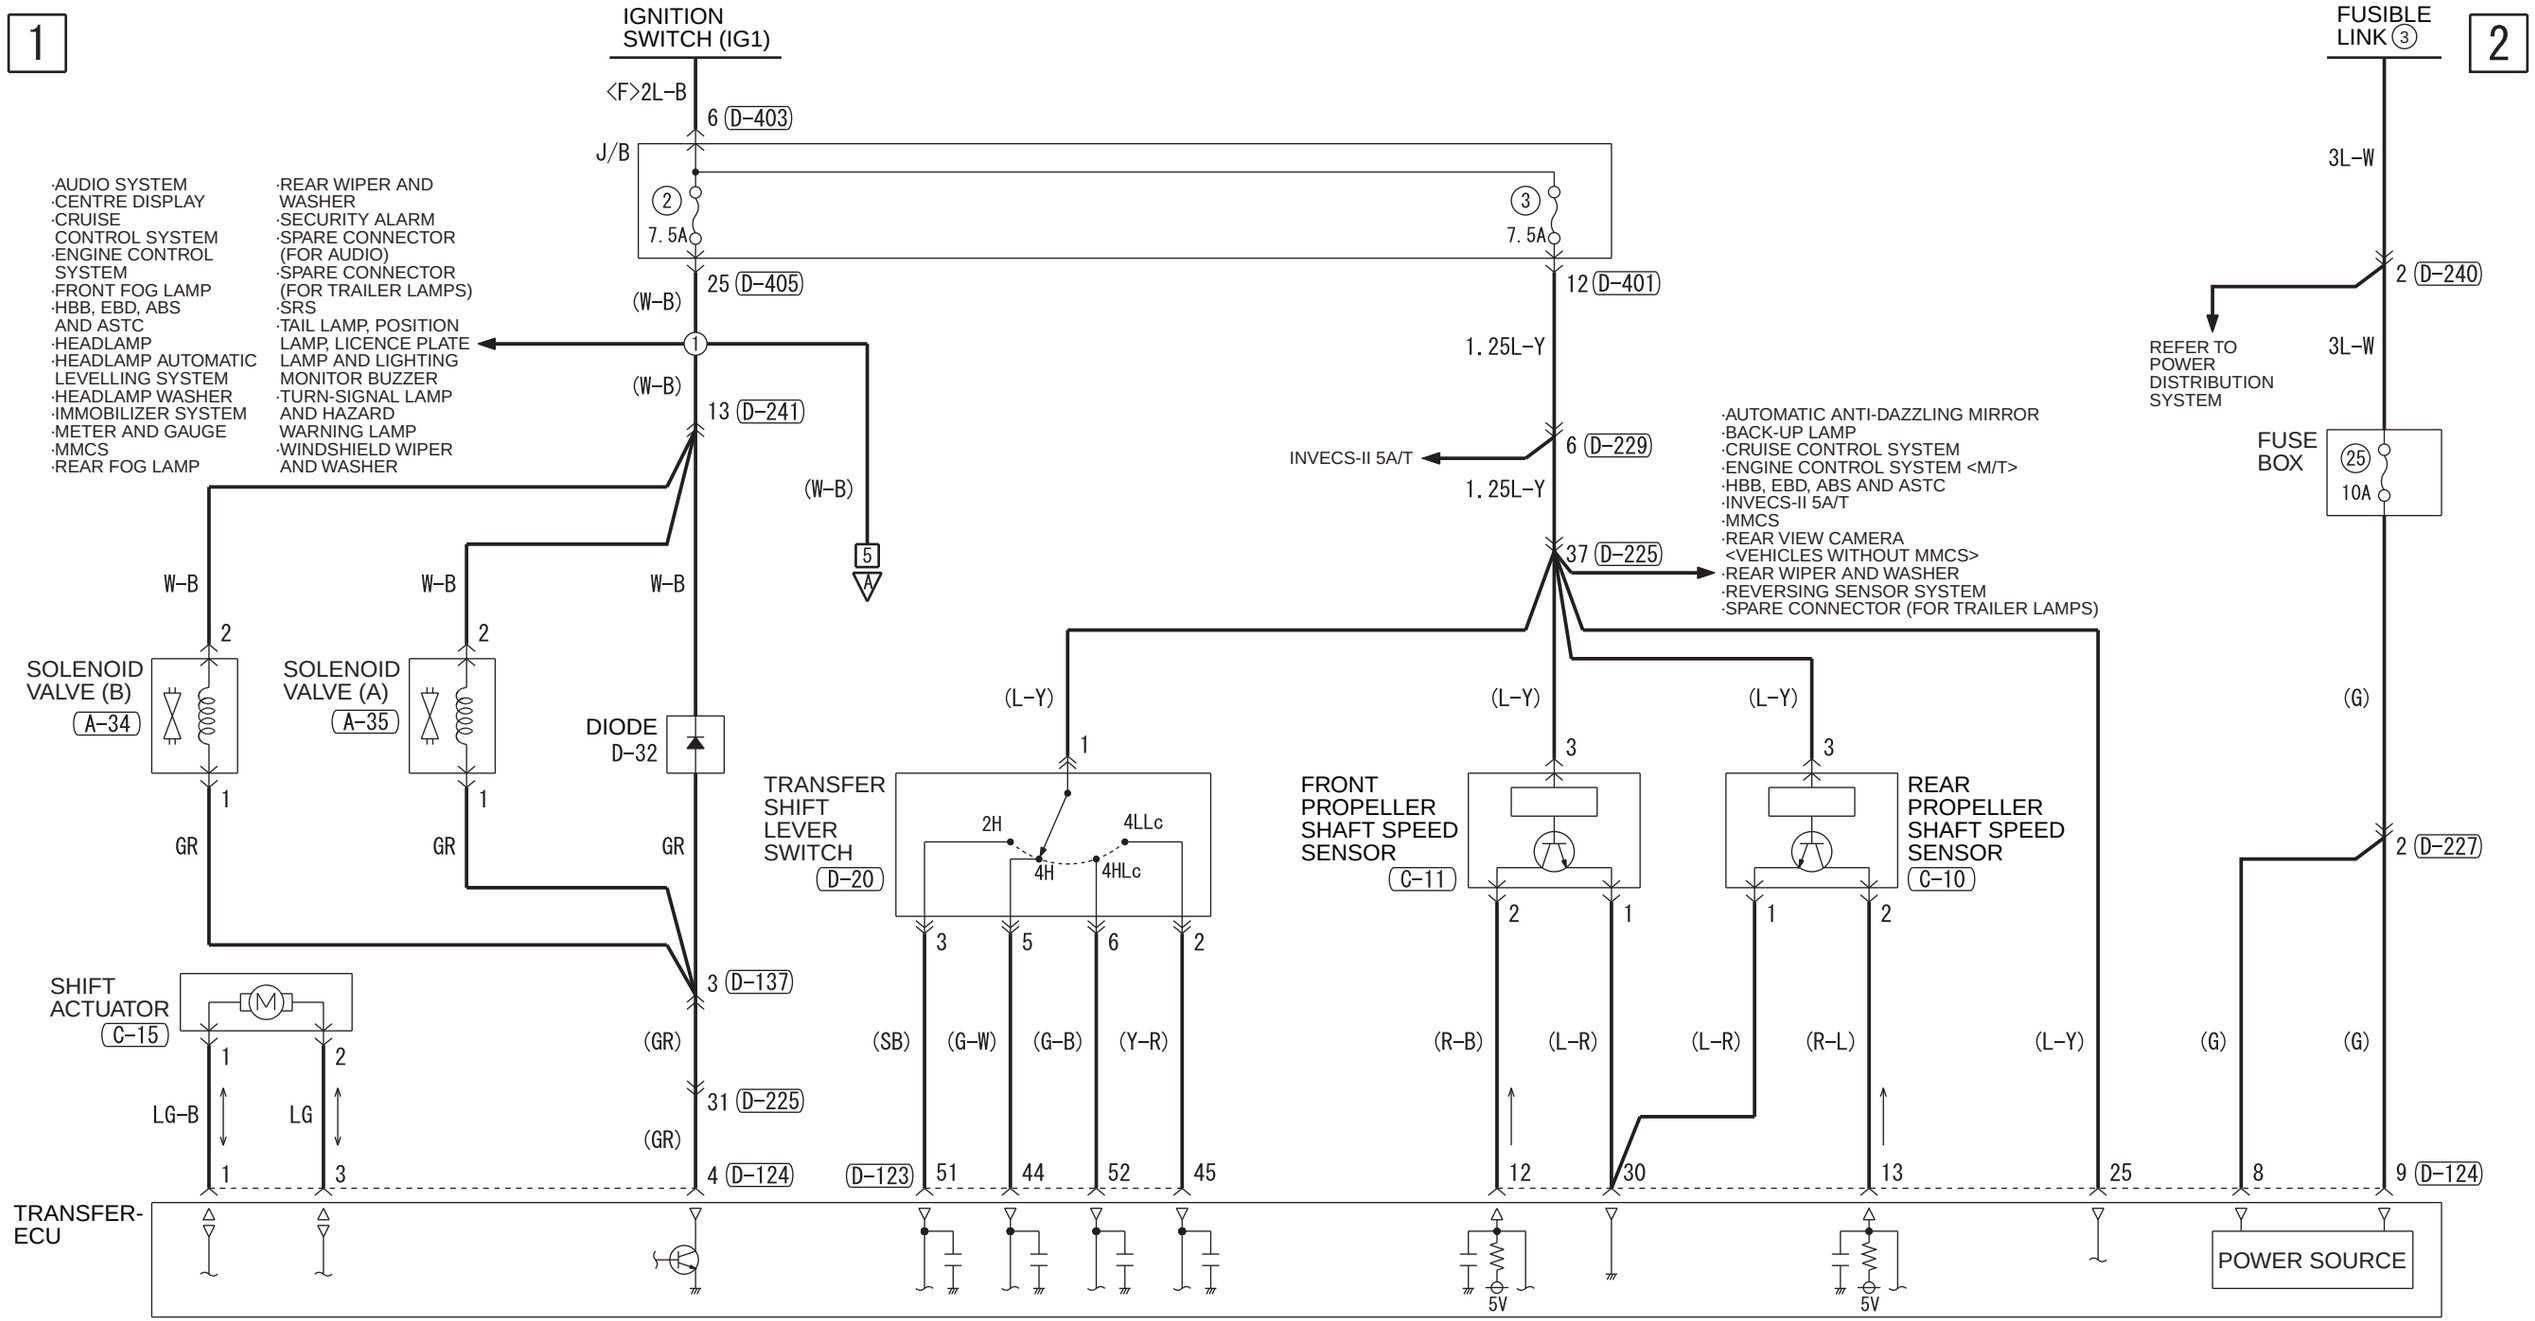
1
2
IGNITION SWITCH (IG1)
<F>2L-B
6 D-403
J/B
7.5A
7.5A
25 D-405
12 D-401
(W-B)
1.25L-Y
·AUDIO SYSTEM
·CENTRE DISPLAY
·CRUISE CONTROL SYSTEM
·ENGINE CONTROL SYSTEM
·FRONT FOG LAMP
·HBB, EBD, ABS AND ASTC
·HEADLAMP
·HEADLAMP AUTOMATIC LEVELLING SYSTEM
·HEADLAMP WASHER
·IMMOBILIZER SYSTEM
·METER AND GAUGE
·MMCS
·REAR FOG LAMP
·REAR WIPER AND WASHER
·SECURITY ALARM
·SPARE CONNECTOR (FOR AUDIO)
·SPARE CONNECTOR (FOR TRAILER LAMPS)
·SRS
·TAIL LAMP, POSITION LAMP, LICENCE PLATE LAMP AND LIGHTING MONITOR BUZZER
·TURN-SIGNAL LAMP AND HAZARD WARNING LAMP
·WINDSHIELD WIPER AND WASHER
13 D-241
6 D-229
INVECS-II 5A/T
·AUTOMATIC ANTI-DAZZLING MIRROR
·BACK-UP LAMP
·CRUISE CONTROL SYSTEM
·ENGINE CONTROL SYSTEM <M/T>
·HBB, EBD, ABS AND ASTC
·INVECS-II 5A/T
·MMCS
·REAR VIEW CAMERA <VEHICLES WITHOUT MMCS>
·REAR WIPER AND WASHER
·REVERSING SENSOR SYSTEM
·SPARE CONNECTOR (FOR TRAILER LAMPS)
37 D-225
W-B
5
A
SOLENOID VALVE (B)
A-34
SOLENOID VALVE (A)
A-35
DIODE D-32
GR
(L-Y)
TRANSFER SHIFT LEVER SWITCH
D-20
2H
4LLc
4H
4HLc
FRONT PROPELLER SHAFT SPEED SENSOR
C-11
REAR PROPELLER SHAFT SPEED SENSOR
C-10
SHIFT ACTUATOR
C-15
LG-B
LG
3 D-137
(GR)
31 D-225
4 D-124
D-123
(SB)
(G-W)
(G-B)
(Y-R)
(R-B)
(L-R)
(R-L)
5V
TRANSFER-ECU
POWER SOURCE
FUSIBLE LINK 3
3L-W
2 D-240
REFER TO POWER DISTRIBUTION SYSTEM
FUSE BOX
25
10A
(G)
2 D-227
9 D-124
A-34 (MU802409)
A-35 (MU802409)
C-10 (MU802348)
C-11 MU802337
C-15 (MU802050)
D-20 MU801447
D-123
D-124
D-137 MU801855
D-240 MU801405
D-241
D-401 MU801857
D-403 MU801331
D-405
D-225
D-227
D-229 MU801873
Wire colour code
B : Black LG : Light green G : Green L : Blue W : White
Y : Yellow SB : Sky blue BR : Brown O : Orange GR : Grey
R : Red P : Pink V : Violet PU : Purple SI : Silver
HCB15E08AC