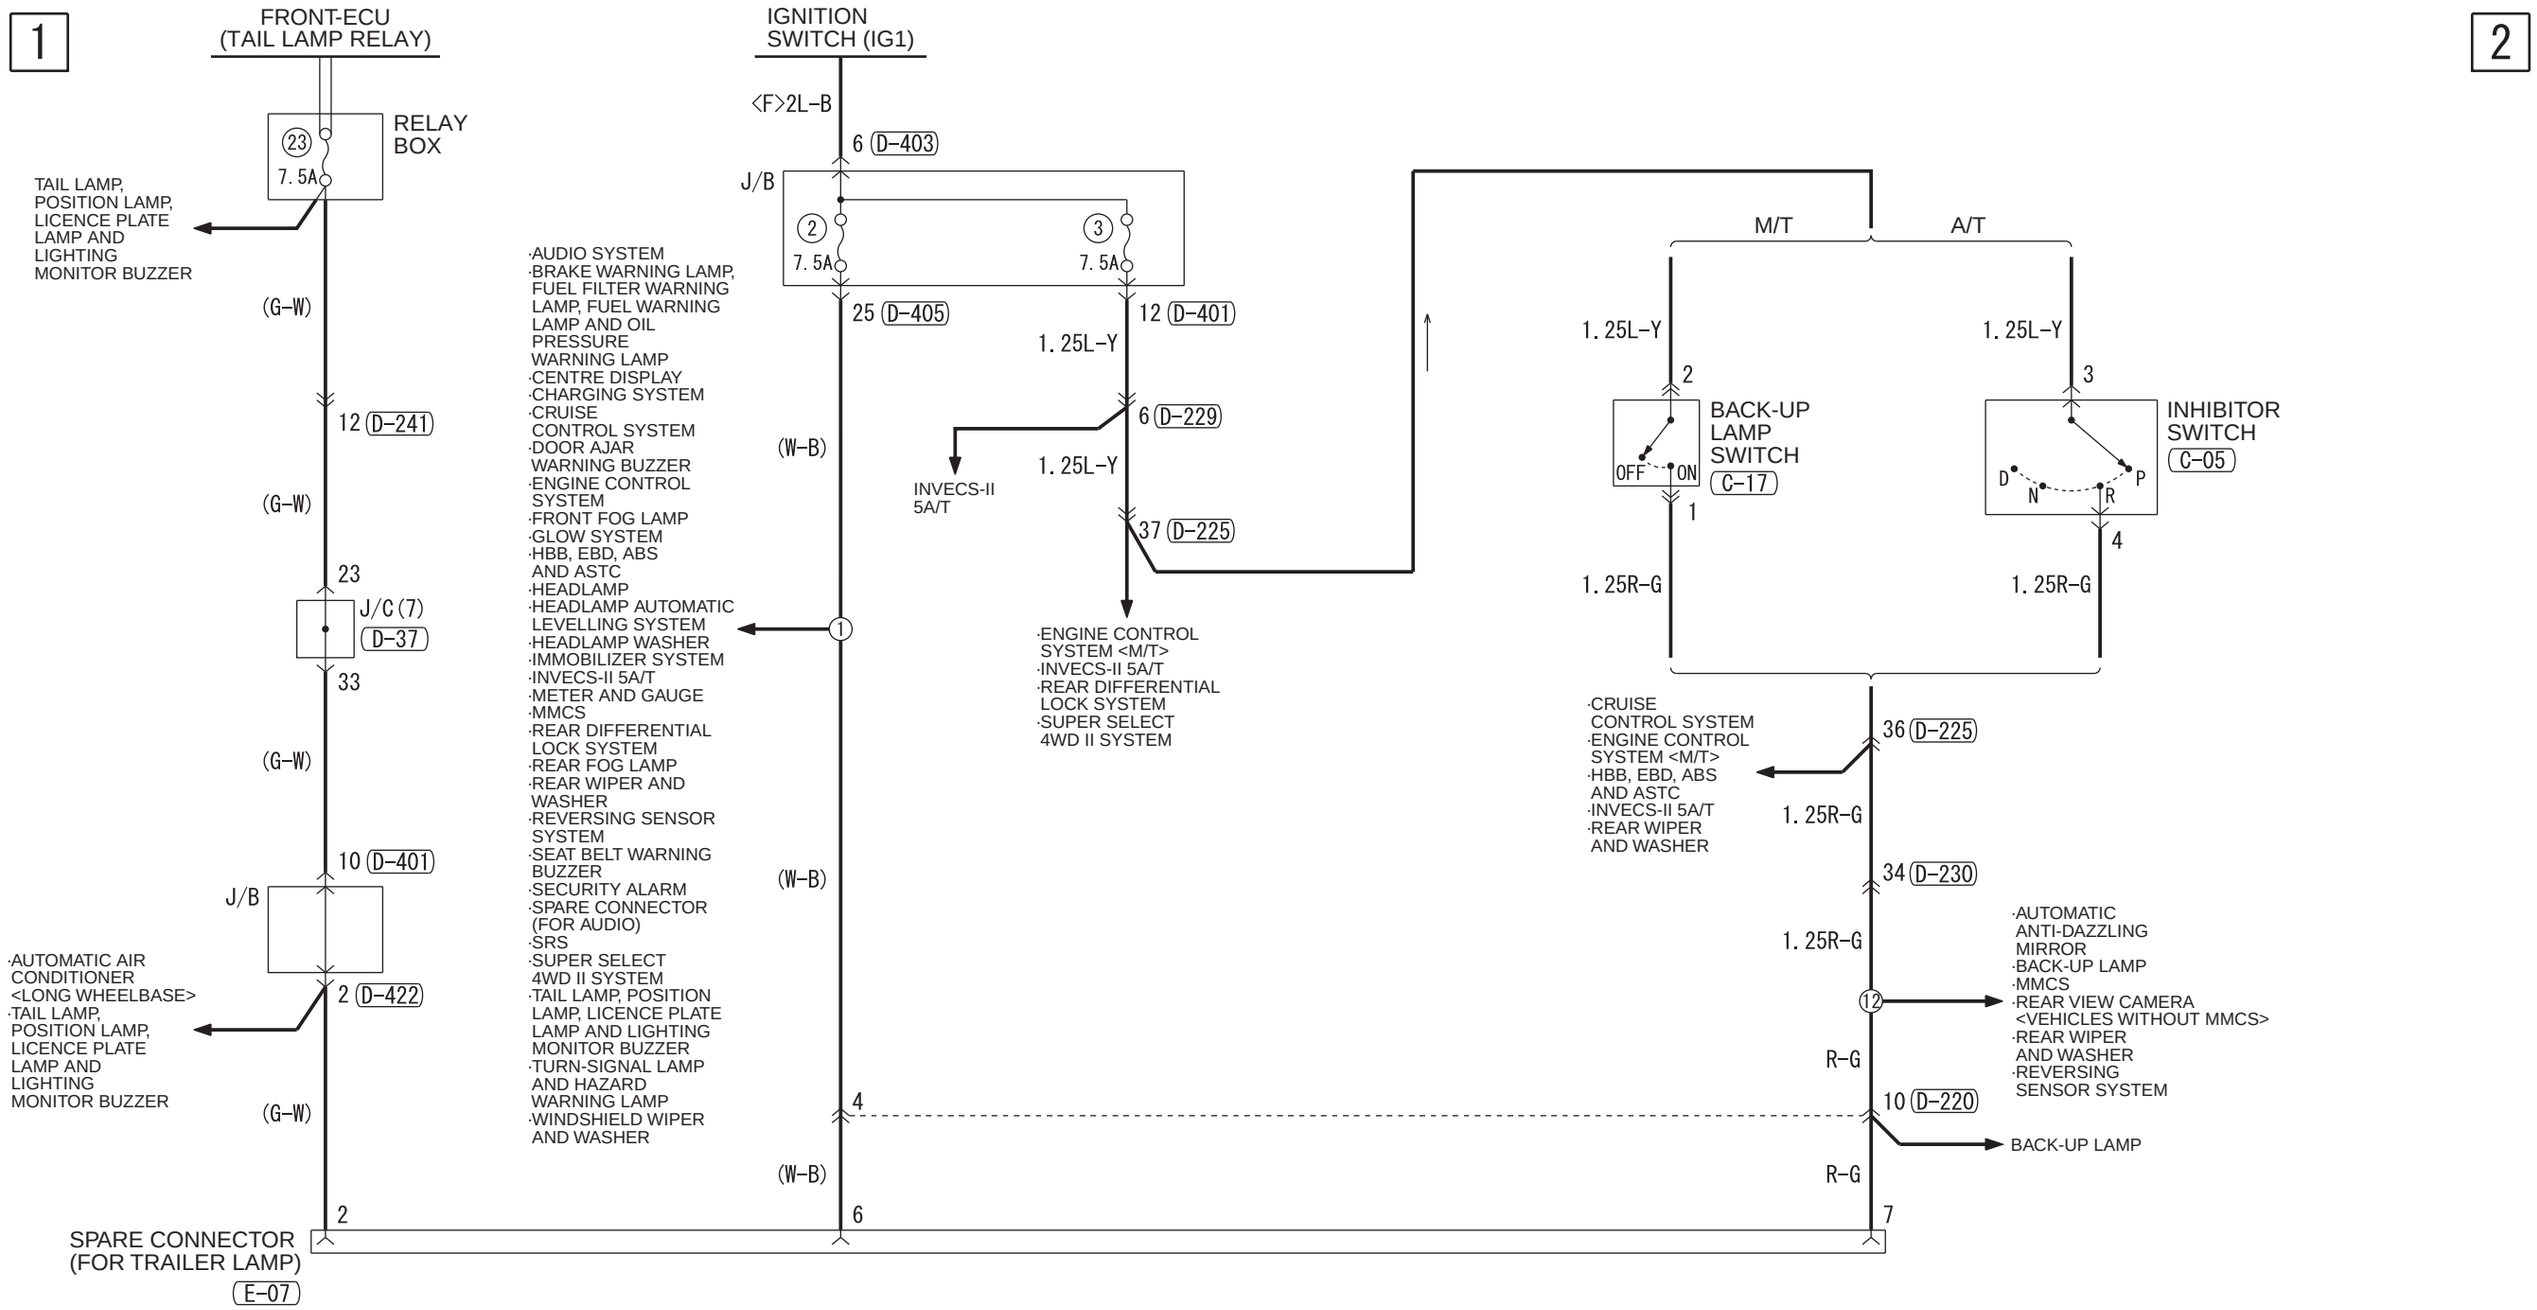
1
2
FRONT-ECU
(TAIL LAMP RELAY)
RELAY BOX
23
7.5A
TAIL LAMP, POSITION LAMP, LICENCE PLATE LAMP AND LIGHTING MONITOR BUZZER
(G-W)
12 D-241
(G-W)
23
J/C (7)
D-37
33
(G-W)
10 D-401
J/B
2 D-422
·AUTOMATIC AIR CONDITIONER <LONG WHEELBASE>
·TAIL LAMP, POSITION LAMP, LICENCE PLATE LAMP AND LIGHTING MONITOR BUZZER
(G-W)
IGNITION SWITCH (IG1)
<F>2L-B
6 D-403
J/B
2
7.5A
3
7.5A
25 D-405
12 D-401
1.25L-Y
6 D-229
INVECS-II 5A/T
1.25L-Y
37 D-225
(W-B)
·AUDIO SYSTEM
·BRAKE WARNING LAMP, FUEL FILTER WARNING LAMP, FUEL WARNING LAMP AND OIL PRESSURE WARNING LAMP
·CENTRE DISPLAY
·CHARGING SYSTEM
·CRUISE CONTROL SYSTEM
·DOOR AJAR WARNING BUZZER
·ENGINE CONTROL SYSTEM
·FRONT FOG LAMP
·GLOW SYSTEM
·HBB, EBD, ABS AND ASTC
·HEADLAMP
·HEADLAMP AUTOMATIC LEVELLING SYSTEM
·HEADLAMP WASHER
·IMMOBILIZER SYSTEM
·INVECS-II 5A/T
·METER AND GAUGE
·MMCS
·REAR DIFFERENTIAL LOCK SYSTEM
·REAR FOG LAMP
·REAR WIPER AND WASHER
·REVERSING SENSOR SYSTEM
·SEAT BELT WARNING BUZZER
·SECURITY ALARM
·SPARE CONNECTOR (FOR AUDIO)
·SRS
·SUPER SELECT 4WD II SYSTEM
·TAIL LAMP, POSITION LAMP, LICENCE PLATE LAMP AND LIGHTING MONITOR BUZZER
·TURN-SIGNAL LAMP AND HAZARD WARNING LAMP
·WINDSHIELD WIPER AND WASHER
1
(W-B)
·ENGINE CONTROL SYSTEM <M/T>
·INVECS-II 5A/T
·REAR DIFFERENTIAL LOCK SYSTEM
·SUPER SELECT 4WD II SYSTEM
4
(W-B)
M/T
A/T
1.25L-Y
2
BACK-UP LAMP SWITCH
C-17
OFF
ON
1
1.25R-G
1.25L-Y
3
INHIBITOR SWITCH
C-05
D
N
R
P
4
1.25R-G
·CRUISE CONTROL SYSTEM
·ENGINE CONTROL SYSTEM <M/T>
·HBB, EBD, ABS AND ASTC
·INVECS-II 5A/T
·REAR WIPER AND WASHER
36 D-225
1.25R-G
34 D-230
1.25R-G
12
·AUTOMATIC ANTI-DAZZLING MIRROR
·BACK-UP LAMP
·MMCS
·REAR VIEW CAMERA <VEHICLES WITHOUT MMCS>
·REAR WIPER AND WASHER
·REVERSING SENSOR SYSTEM
R-G
10 D-220
BACK-UP LAMP
R-G
2
6
7
SPARE CONNECTOR (FOR TRAILER LAMP)
E-07

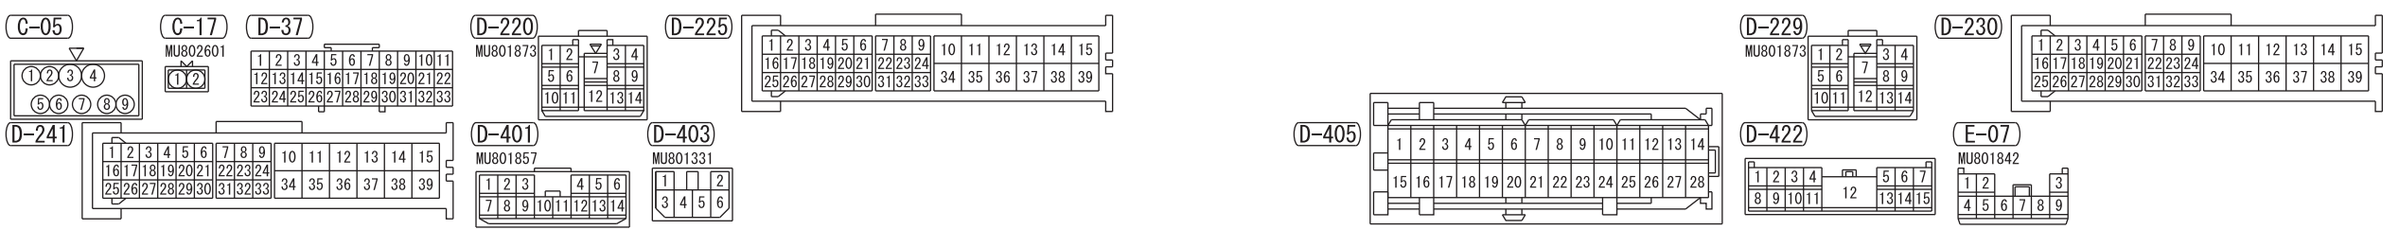
C-05
C-17
MU802601
D-37
D-220
MU801873
D-225
D-241
D-401
MU801857
D-403
MU801331
D-405
D-229
MU801873
D-230
D-422
E-07
MU801842

HCB15E15AC